
# Master™ Convex Three Sided Hanging Structures

#### SHD

Convex Three Sided tension fabric hanging structures are made in the USA and are of the utmost quality and durability. State-of-the-art zipper pillowcase dye-sublimated stretch fabric coverings are combined with advanced, lightweight aluminum structures to provide unique design, functionality, and style. Hanging structures are offered in a wide variety of shapes and sizes. Stretch fabric graphics are hand-sewn, durable and dry-cleanable.

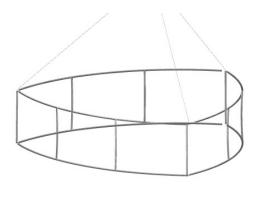

Frame






Single sided graphic


Double sided graphic

17"



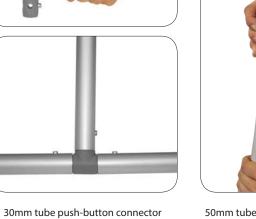



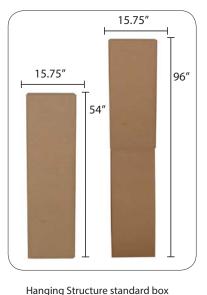



OCE Expandable Display Case Available as an upgrade

We are continually improving and modifying our product range and reserve the right to vary the specifications without prior notice. All dimensions and weights quoted are approximate and we accept no responsibility for variance. E&OE. See Graphic Templates for graphic bleed specifications.

#### features and benefits:

- Convex three sided hanging structures come in 8', 10', 12', 14', 16', 18' & 20' width configurations at varying heights of 2', 3', 4', 5' & 6'
- Shapes 12' width and under are constructed with 30mm (1<sup>1/8</sup>") tubes and push-button connectors for simple assembly
- Shapes 14' width and over are constructed with 50mm (2") tubes and internal expanding spigot connectors for unmatched structural integrity
- Engineer certified (structural engineer certificate available upon request)
- Zippered pillowcase fabric graphic options include: unprinted (white and black), single-sided (outer panel printed only) and double-sided (inner and outer panels printed)
- All pillowcase graphics come standard with opaque liner
- Comes standard with hanging hardware, bags and heavy-duty shipping and storage box(es)
- OCE Expandable rugged molded shipping cases available as an upgrade
- Collapses to a fraction of its size
- Easy to store and ship
- Quick to set up


#### dimensions:


Hardware can be found on page 2

Graphic dimensions can be found in the graphic templates.

#### **Graphic Material:**

5 oz. Soft Knit Dye-sublimated zipper pillowcase fabric

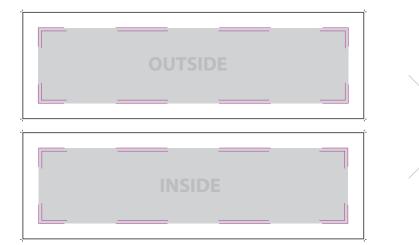

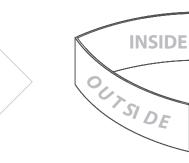



2010 Hancock Street San Diego, CA 92110 800.697.4670 sales@beautifuldisplays.com

				SHD-8' WIDTH			
HEIGHT	HARDWARE CODE	# OF BOXES OR CASES	UNPRINTED GRAPHIC CODE	SINGLE-SIDED GRAPHIC CODE	OUTER GRAPHIC SPECS	DOUBLE-SIDED GRAPHIC CODE	INSIDE GRAPHIC SPECS
2′	SHD-0802	1	SHD-0802-U	SHD-0802-G	98.5"W X 24"H	SHD-0802-GDBL	95.8"W X 24"H
3′	SHD-0803	1	SHD-0803-U	SHD-0803-G	98.5"W X 36"H	SHD-0803-GDBL	95.8"W X 36"H
4′	SHD-0804	1	SHD-0804-U	SHD-0804-G	98.5"W X 48"H	SHD-0804-GDBL	95.8"W X 48"H
5′	SHD-0805	1	SHD-0805-U	SHD-0805-G	98.5"W X 60"H	SHD-0805-GDBL	95.8"W X 60"H
6′	SHD-0806	1	SHD-0806-U	SHD-0806-G	98.5″W X 72″H	SHD-0806-GDBL	95.8"W X 72"H

				SHD-10' WIDTH			
HEIGHT	HARDWARE CODE	# OF BOXES OR CASES	UNPRINTED GRAPHIC CODE	SINGLE-SIDED GRAPHIC CODE	OUTER GRAPHIC SPECS	DOUBLE-SIDED GRAPHIC CODE	INSIDE GRAPHIC SPECS
2′	SHD-1002	1	SHD-1002-U	SHD-1002-G	123.2"W X 24"H	SHD-1002-GDBL	120.5"W X 24"H
3′	SHD-1003	1	SHD-1003-U	SHD-1003-G	123.2"W X 36"H	SHD-1003-GDBL	120.5"W X 36"H
4′	SHD-1004	1	SHD-1004-U	SHD-1004-G	123.2"W X 48"H	SHD-1004-GDBL	120.5"W X 48"H
5′	SHD-1005	1	SHD-1005-U	SHD-1005-G	123.2"W X 60"H	SHD-1005-GDBL	120.5"W X 60"H
6′	SHD-1006	1	SHD-1006-U	SHD-1006-G	123.2"W X 72"H	SHD-1006-GDBL	120.5"W X 72"H

	SHD-12' WIDTH						
HEIGHT	HARDWARE CODE	# OF BOXES OR CASES	UNPRINTED GRAPHIC CODE	SINGLE-SIDED GRAPHIC CODE	OUTER GRAPHIC SPECS	DOUBLE-SIDED GRAPHIC CODE	INSIDE GRAPHIC SPECS
2′	SHD-1202	1	SHD-1202-U	SHD-1202-G	147.8"W X 24"H	SHD-1202-GDBL	145.1"W X 24"H
3′	SHD-1203	1	SHD-1203-U	SHD-1203-G	147.8"W X 36"H	SHD-1203-GDBL	145.1"W X 36"H
4′	SHD-1204	1	SHD-1204-U	SHD-1204-G	147.8"W X 48"H	SHD-1204-GDBL	145.1"W X 48"H
5′	SHD-1205	1	SHD-1205-U	SHD-1205-G	147.8"W X 60"H	SHD-1205-GDBL	145.1"W X 60"H
6′	SHD-1206	1	SHD-1206-U	SHD-1206-G	147.8"W X 72"H	SHD-1206-GDBL	145.1″W X 72″H

	SHD-14' WIDTH						
HEIGHT	HARDWARE CODE	# OF BOXES OR CASES	UNPRINTED GRAPHIC CODE	SINGLE-SIDED GRAPHIC CODE	OUTER GRAPHIC SPECS	DOUBLE-SIDED GRAPHIC CODE	INSIDE GRAPHIC SPECS
2′	SHD-1402	2	SHD-1402-U	SHD-1402-G	172.4"W X 24"H	SHD-1402-GDBL	167.9"W X 24"H
3′	SHD-1403	2	SHD-1403-U	SHD-1403-G	172.4"W X 36"H	SHD-1403-GDBL	167.9"W X 36"H
4′	SHD-1404	2	SHD-1404-U	SHD-1404-G	172.4"W X 48"H	SHD-1404-GDBL	167.9"W X 48"H
5′	SHD-1405	2	SHD-1405-U	SHD-1405-G	172.4"W X 60"H	SHD-1405-GDBL	167.9"W X 60"H
6′	SHD-1406	2	SHD-1406-U	SHD-1406-G	172.4"W X 72"H	SHD-1406-GDBL	167.9"W X 72"H

				SHD-16' WIDTH			
HEIGHT	HARDWARE CODE	# OF BOXES OR CASES	UNPRINTED GRAPHIC CODE	SINGLE-SIDED GRAPHIC CODE	OUTER GRAPHIC SPECS	DOUBLE-SIDED GRAPHIC CODE	INSIDE GRAPHIC SPECS
2′	SHD-1602	2	SHD-1602-U	SHD-1602-G	197.1"W X 24"H	SHD-1602-GDBL	192.6"W X 24"H
3′	SHD-1603	2	SHD-1603-U	SHD-1603-G	197.1"W X 36"H	SHD-1603-GDBL	192.6"W X 36"H
4′	SHD-1604	2	SHD-1604-U	SHD-1604-G	197.1"W X 48"H	SHD-1604-GDBL	192.6"W X 48"H
5′	SHD-1605	2	SHD-1605-U	SHD-1605-G	197.1"W X 60"H	SHD-1605-GDBL	192.6"W X 60"H
6′	SHD-1606	2	SHD-1606-U	SHD-1606-G	197.1"W X 72"H	SHD-1606-GDBL	192.6"W X 72"H

	SHD-18' WIDTH						
HEIGHT	HARDWARE CODE	# OF BOXES OR CASES	UNPRINTED GRAPHIC CODE	SINGLE-SIDED GRAPHIC CODE	OUTER GRAPHIC SPECS	DOUBLE-SIDED GRAPHIC CODE	INSIDE GRAPHIC SPECS
2′	SHD-1802	2	SHD-1802-U	SHD-1802-G	221.7"W X 24"H	SHD-1802-GDBL	217.2"W X 24"H
3′	SHD-1803	2	SHD-1803-U	SHD-1803-G	221.7"W X 36"H	SHD-1803-GDBL	217.2"W X 36"H
4′	SHD-1804	2	SHD-1804-U	SHD-1804-G	221.7"W X 48"H	SHD-1804-GDBL	217.2"W X 48"H
5′	SHD-1805	2	SHD-1805-U	SHD-1805-G	221.7"W X 60"H	SHD-1805-GDBL	217.2"W X 60"H
6′	SHD-1806	2	SHD-1806-U	SHD-1806-G	221.7"W X 72"H	SHD-1806-GDBL	217.2"W X 72"H

				SHD-20' WIDTH			
HEIGHT	HARDWARE CODE	# OF BOXES OR CASES	UNPRINTED GRAPHIC CODE	SINGLE-SIDED GRAPHIC CODE	OUTER GRAPHIC SPECS	DOUBLE-SIDED GRAPHIC CODE	INSIDE GRAPHIC SPECS
2′	SHD-2002	2	SHD-2002-U	SHD-2002-G	246.4"W X 24"H	SHD-2002-GDBL	241.9"W X 24"H
3′	SHD-2003	2	SHD-2003-U	SHD-2003-G	246.4"W X 36"H	SHD-2003-GDBL	241.9"W X 36"H
4′	SHD-2004	2	SHD-2004-U	SHD-2004-G	246.4"W X 48"H	SHD-2004-GDBL	241.9"W X 48"H
5′	SHD-2005	2	SHD-2005-U	SHD-2005-G	246.4"W X 60"H	SHD-2005-GDBL	241.9"W X 60"H
6′	SHD-2006	2	SHD-2006-U	SHD-2006-G	246.4"W X 72"H	SHD-2006-GDBL	241.9"W X 72"H

<sup>\*</sup>ALL GRAPHIC SIZES NOTED ARE FINISHED SIZES AND DO NOT INCLUDE REQUIRED BLEEDS. REFERENCE GRAPHIC TEMPLATE.



Unprinted graphic black & white options



Single sided graphic



Double sided graphic

#### SET UP INSTRUCTIONS:


1. CONNECT BOTTOM AND TOP TUBES FOLLOWING THE LABELS

1. CONNECT BOTTOM AND TOP TUBES FOLLOWING THE LAG
2. CONNECT SIDE TUBES
3. CLEAN THE FRAME AND PLACE THEM ON CLEAN PLACE
4. CAREFULLY REMOVE FABRIC COVER FROM BAG
5. PLACE COVER AROUND THE BOTTOM OF THE FRAME
6. PULL COVER CAREFULLY UP TO THE TOP
7. CLOSE ALL ZIPPERS
8. ADJUST FABRIC AROUND THE FRAME
9. CONNECT CABLE HARNESS TO THE EYEBOLTS
10. COMPLETELY TIGHTEN THREADED CONNECTORS


BREAK DOWN INSTRUCTIONS: REVERSE SET-UP STEPS TO BREAKDOWN FRAME


FABRIC CARE INSTRUCTIONS: 1. UNZIP COVER ZIPPERS 2. CAREFULLY REMOVE FABRIC COVER


3. CLOSE ALL ZIPPERS 4. FOLD OR ROLL NEATLY 5. PLACE FABRIC IN COVER BAG

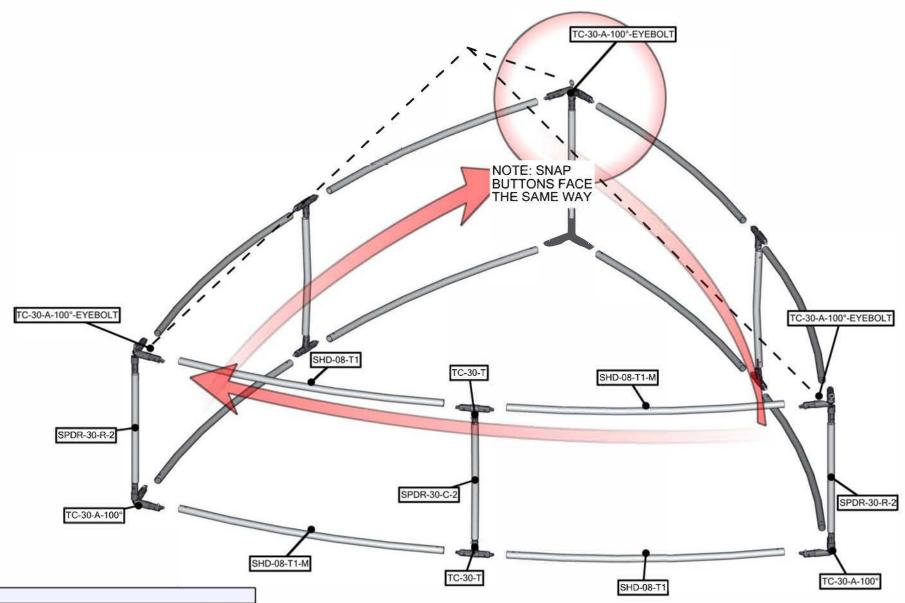

		STEP 1
<	1	

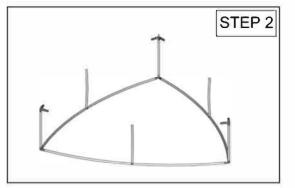

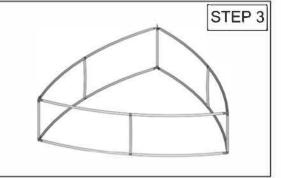


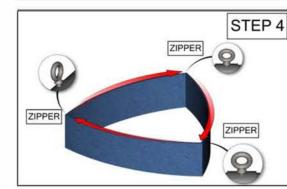

QTY	CODE	DESCRIPTION
6	SHD-08-T1	TUBE 1 FOR 12' CONVEX THREE SIDED HANGING FABRIC STRUCTURES
6	SHD-08-T1-M	TUBE 1 FOR 12' CONVEX THREE SIDED HANGING FABRIC STRUCTURES
3	SPDR-30-C-2	30MM CURVED SPREADER FOR 2' STRUCTURES
3	SPDR-30-R-2	30MM STRAIGHT SPREADER FOR CORNERS OF 2' STRUCTURES USING RIVETS
3	TC-30-A-100°-EYEBOLT	TC-30-A ASSEMBLED at 100° WITH 1/4-20 EYE BOLT
3	TC-30-A-100°	TC-30-A ASSEMBLED at 100°
6	TC-30-T	T JUNCTION FOR 30MM TUBING

TOTAL WEIGHT: 24.9 (lbs) MAX SIZE:45.3(in) HARDWARE:16.4 (lbs) GRAPHIC:6.8 (lbs)



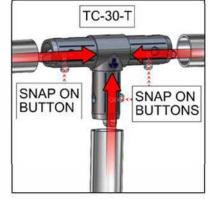



4. FOLD OR ROLL NEATLY

5. PLACE FABRIC IN COVER BAG

SET UP INSTRUCTIONS: I. CONNECT BOTTOM AND TOP TUBES FOLLOWING THE LABELS 2. CONNECT SIDE TUBES 2. CONNECT SIDE TUBES
3. CLEAN THE FRAME AND PLACE THEM ON CLEAN PLACE
4. CAREFULLY REMOVE FABRIC COVER FROM BAG
5. PLACE COVER AROUND THE BOTTOM OF THE FRAME
6. PULL COVER CAREFULLY UP TO THE TOP
7. CLOSE ALL ZIPPERS
8. ADJUST FABRIC AROUND THE FRAME
9. CONNECT CABLE HARNESS TO THE EYEBOLTS
10. COMPLETELY TIGHTEN THREADED CONNECTORS BREAK DOWN INSTRUCTIONS: REVERSE SET-UP STEPS TO BREAKDOWN FRAME FABRIC CARE INSTRUCTIONS: 1. UNZIP COVER ZIPPERS 2. CAREFULLY REMOVE FABRIC COVER 3. CLOSE ALL ZIPPERS

TC-30-A-100°-EYEBOLT

MAX	AL WEIGHT: 29.9 (I ( SIZE:45.3 (in) RDWARE:17.9 (lbs) APHIC:10.2 (lbs)	bs)
QTY	CODE	DESCRIPTION
6	SHD-08-T1-M	TUBE 1 FOR 12' CONVEX THREE SIDED HANGING FABRIC STRUCTURES
6	SHD-08-T1	TUBE 1 FOR 12' CONVEX THREE SIDED HANGING FABRIC STRUCTURES
3	SPDR-30-C-3	30MM CURVED SPREADER FOR 3' STRUCTURES
3	SPDR-30-R-3	30MM STRAIGHT SPREADER FOR CORNERS OF 3' STRUCTURES USING RIVETS


TC-30-A ASSEMBLED at 100°


TC-30-A ASSEMBLED at 100° WITH 1/4-20 EYE BOLT





TC-30-A-100°


TC-30-T

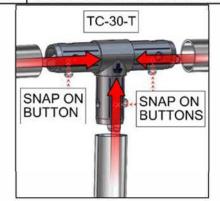


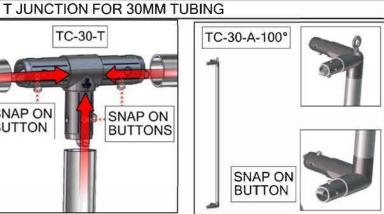


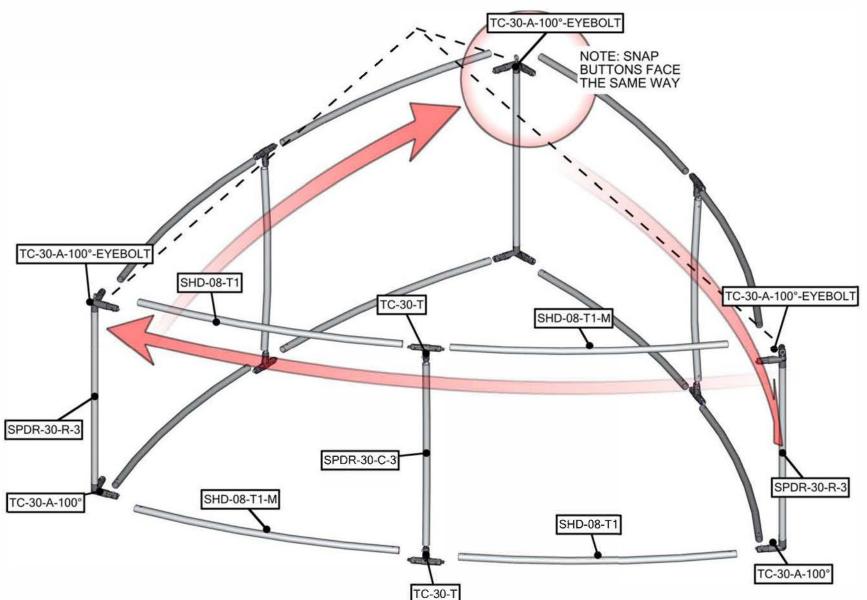

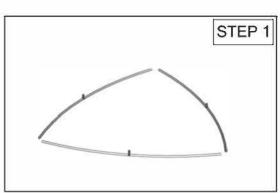

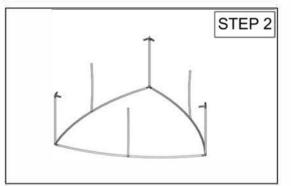

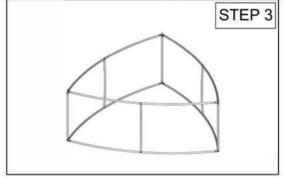

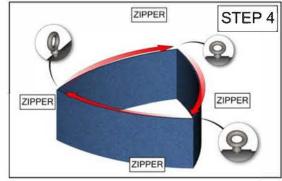


SET UP INSTRUCTIONS:


1. CONNECT BOTTOM AND TOP TUBES FOLLOWING THE LABELS
2. CONNECT SIDE TUBES
3. CLEAN THE FRAME AND PLACE THEM ON CLEAN PLACE
4. CAREFULLY REMOVE FABRIC COVER FROM BAG
5. PLACE COVER AROUND THE BOTTOM OF THE FRAME
6. PULL COVER CAREFULLY UP TO THE TOP
7. CLOSE ALL ZIPPERS
8. ADJUST FABRIC AROUND THE FRAME
9. CONNECT CABLE HARNESS TO THE EYEBOLTS
10. COMPLETELY TIGHTEN THREADED CONNECTORS


BREAK DOWN INSTRUCTIONS: REVERSE SET-UP STEPS TO BREAKDOWN FRAME


FABRIC CARE INSTRUCTIONS: 1. UNZIP COVER ZIPPERS 2. CAREFULLY REMOVE FABRIC COVER


3. CLOSE ALL ZIPPERS 4. FOLD OR ROLL NEATLY 5. PLACE FABRIC IN COVER BAG

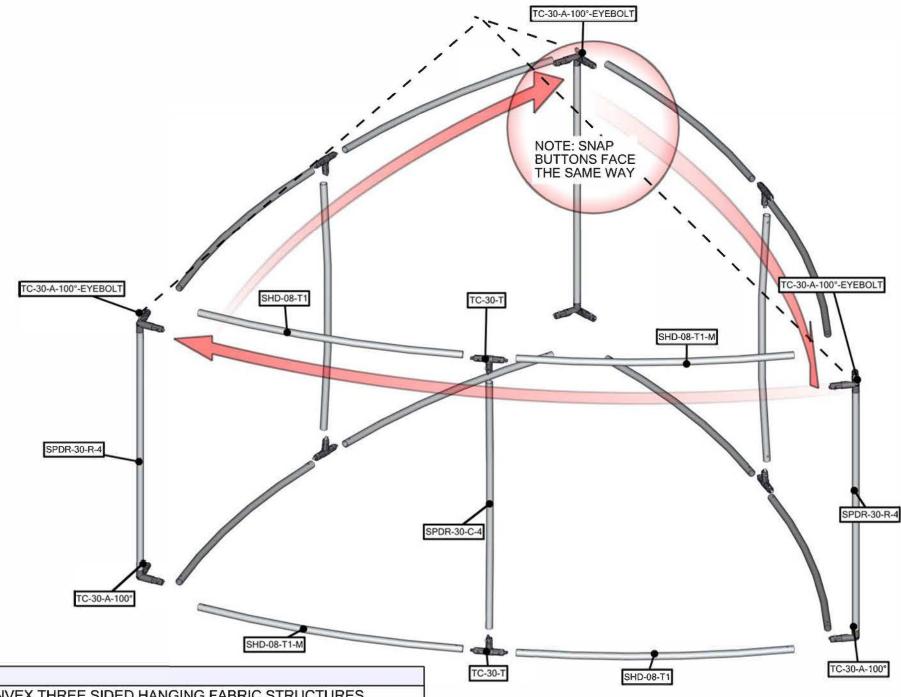

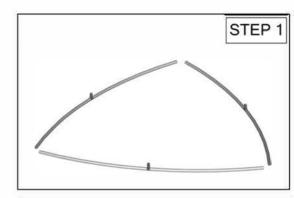

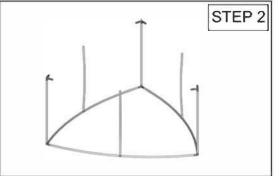

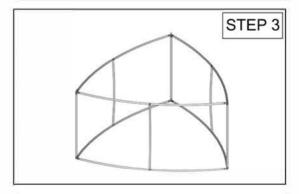


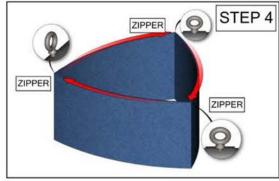

TOTAL WEIGHT: 35.0 (lbs) MAX SIZE:45.6 (in) HARDWARE:19.4 (lbs) GRAPHIC:13.7 (lbs)

QTY	CODE	DESCRIPTION
6	SHD-08-T1	TUBE 1 FOR 12' CONVEX THREE SIDED HANGING FABRIC STRUCTURES
6	SHD-08-T1-M	TUBE 1 FOR 12' CONVEX THREE SIDED HANGING FABRIC STRUCTURES
3	SPDR-30-C-4	30MM CURVED SPREADER FOR 4' STRUCTURES
3	SPDR-30-R-4	30MM STRAIGHT SPREADER FOR CORNERS OF 4' STRUCTURES USING RIVETS
3	TC-30-A-100°-EYEBOLT	TC-30-A ASSEMBLED at 100° WITH 1/4-20 EYE BOLT
3	TC-30-A-100°	TC-30-A ASSEMBLED at 100°
6	TC-30-T	T JUNCTION FOR 30MM TUBING



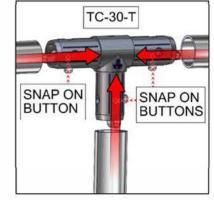



SET UP INSTRUCTIONS:

1. CONNECT BOTTOM AND TOP TUBES FOLLOWING THE LABELS

1. CONNECT BOTTOM AND TOP TUBES FOLLOWING THE LAG
2. CONNECT SIDE TUBES
3. CLEAN THE FRAME AND PLACE THEM ON CLEAN PLACE
4. CAREFULLY REMOVE FABRIC COVER FROM BAG
5. PLACE COVER AROUND THE BOTTOM OF THE FRAME
6. PULL COVER CAREFULLY UP TO THE TOP
7. CLOSE ALL ZIPPERS
8. ADJUST FABRIC AROUND THE FRAME
9. CONNECT CABLE HARNESS TO THE EYEBOLTS
10. COMPLETELY TIGHTEN THREADED CONNECTORS


BREAK DOWN INSTRUCTIONS: REVERSE SET-UP STEPS TO BREAKDOWN FRAME


FABRIC CARE INSTRUCTIONS: 1. UNZIP COVER ZIPPERS 2. CAREFULLY REMOVE FABRIC COVER


3. CLOSE ALL ZIPPERS

4. FOLD OR ROLL NEATLY
5. PLACE FABRIC IN COVER BAG


TOTAL WEIGHT: 40.0 (lbs) MAX SIZE:57.5 (in) HARDWARE:20.9 (lbs) GRAPHIC:17.1 (lbs)

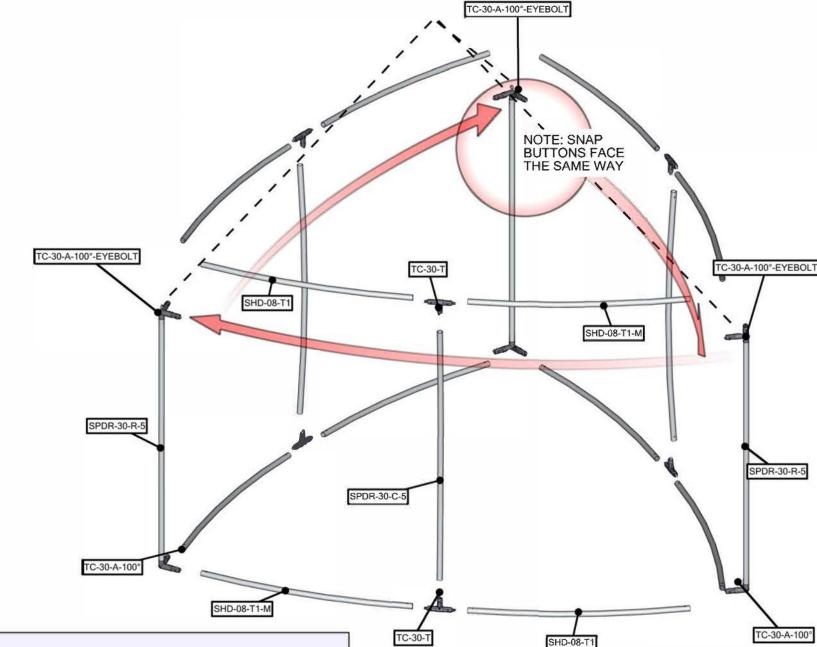


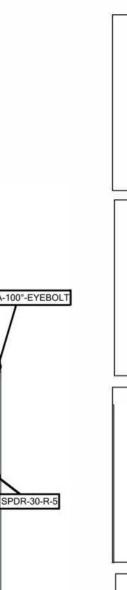

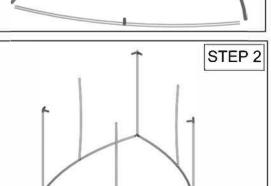


STEP 1

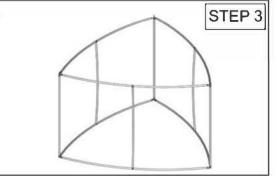

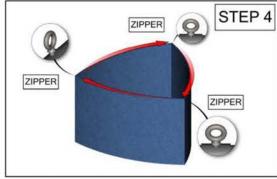

QTY	CODE	DESCRIPTION
6	SHD-08-T1	TUBE 1 FOR 12' CONVEX THREE SIDED HANGING FABRIC STRUCTURES
6	SHD-08-T1-M	TUBE 1 FOR 12' CONVEX THREE SIDED HANGING FABRIC STRUCTURES
3	SPDR-30-C-5	30MM CURVED SPREADER FOR 5' STRUCTURES
3	SPDR-30-R-5	30MM STRAIGHT SPREADER FOR CORNERS OF 5' STRUCTURES USING RIVETS
3	TC-30-A-100°-EYEBOLT	TC-30-A ASSEMBLED at 100° WITH 1/4-20 EYE BOLT
3	TC-30-A-100°	TC-30-A ASSEMBLED at 100°
6	TC-30-T	T JUNCTION FOR 30MM TUBING



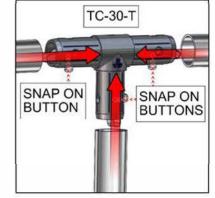



SET UP INSTRUCTIONS:

. CONNECT BOTTOM AND TOP TUBES FOLLOWING THE LABELS

2. CONNECT SIDE TUBES
3. CLEAN THE FRAME AND PLACE THEM ON CLEAN PLACE
4. CAREFULLY REMOVE FABRIC COVER FROM BAG
5. PLACE COVER AROUND THE BOTTOM OF THE FRAME
6. PULL COVER CAREFULLY UP TO THE TOP

7. CLOSE ALL ZIPPERS

9. CONNECT CABLE HARNESS TO THE EYEBOLTS
10. COMPLETELY TIGHTEN THREADED CONNECTORS

BREAK DOWN INSTRUCTIONS: REVERSE SET-UP STEPS TO BREAKDOWN FRAME

FABRIC CARE INSTRUCTIONS:

1. UNZIP COVER ZIPPERS

2. CAREFULLY REMOVE FABRIC COVER

3. CLOSE ALL ZIPPERS


4. FOLD OR ROLL NEATLY

5. PLACE FABRIC IN COVER BAG


TOTAL WEIGHT: 45.5 (lbs) MAX SIZE: 45.3 (in) HARDWARE: 22.8 (lbs)


	GRAPHIC: 20.6 (lbs)		
QTY	CODE	DESCRIPTION	
1	CH-SP3-LD-06	3-CABLE SINGLE POINT LIGHT DUTY HARNESS WITH 72" LENGTHS 1/16" CABLE	
6	SHD-08-T1	TUBE 1 FOR 12' CONVEX THREE SIDED HANGING FABRIC STRUCTURES	
6	SHD-08-T1-M	TUBE 1 FOR 12' CONVEX THREE SIDED HANGING FABRIC STRUCTURES	
6	SPDR-30-C-6	30MM CURVED SPREADER FOR 6' STRUCTURES	
6	SPDR-30-S-6	30MM STRAIGHT SPREADER FOR CORNERS OF 6' HIGH STRUCTURES	
3	SPDR-30-S-5	30MM STRAIGHT SPREADER FOR CORNERS OF 5' HIGH STRUCTURES	
3	TC-30-A-100°-EYEBOLT	TC-30-A ASSEMBLED at 100° WITH 1/4-20 EYE BOLT	
3	TC-30-A-100°	TC-30-A ASSEMBLED at 100°	
3	TC-30-S	INLINE CONNECTOR FOR 30MM TUBING	
6	TC-30-T	T JUNCTION FOR 30MM TUBING	




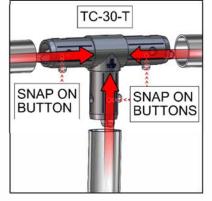





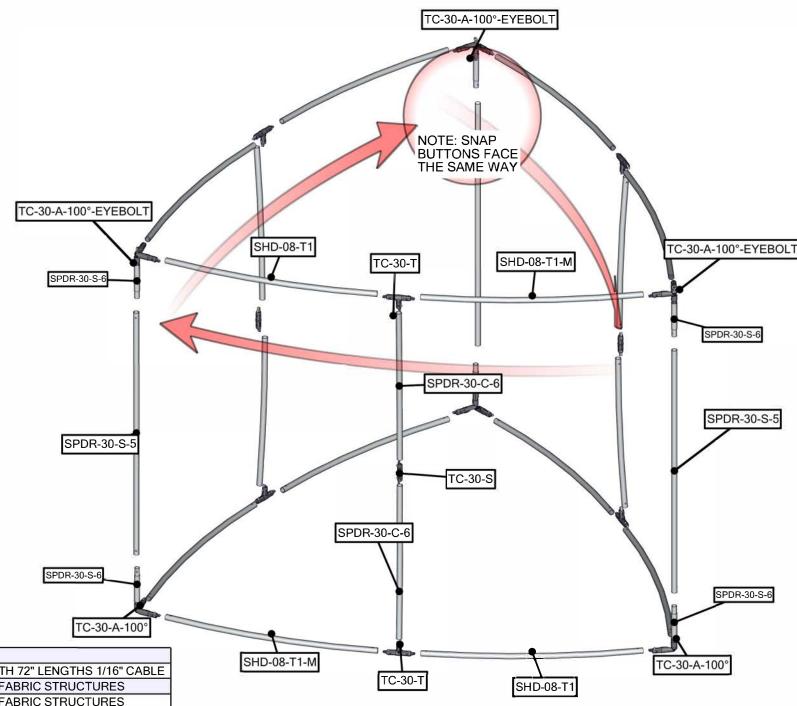


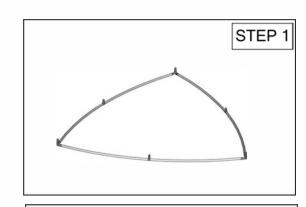


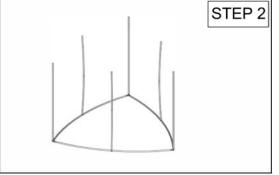


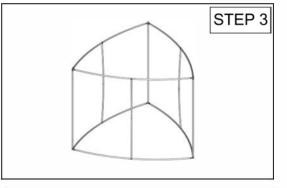


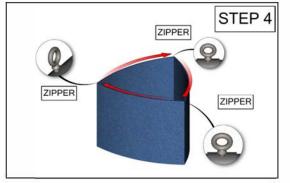


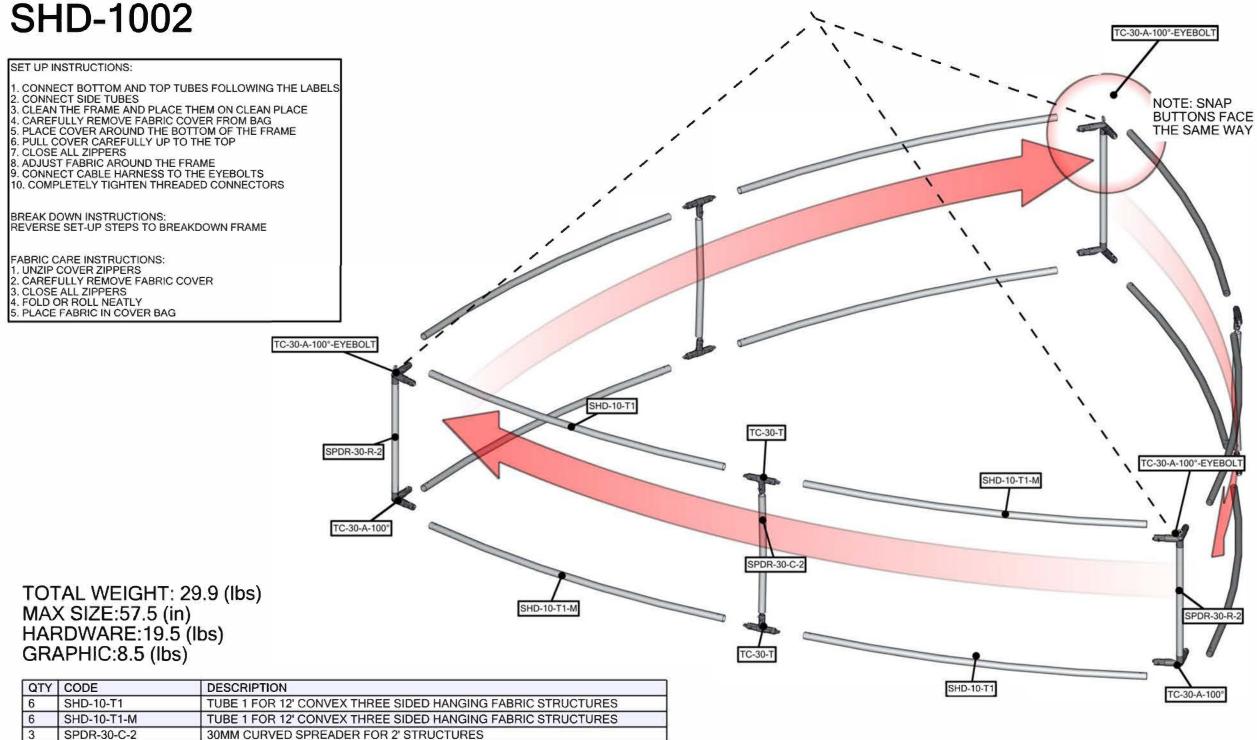


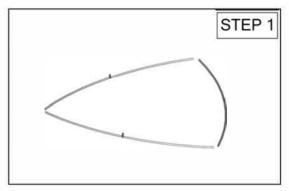

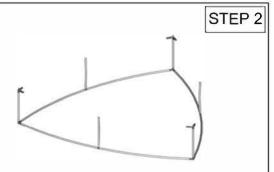

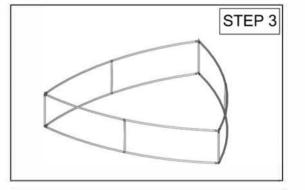

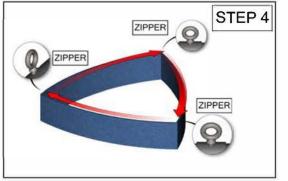


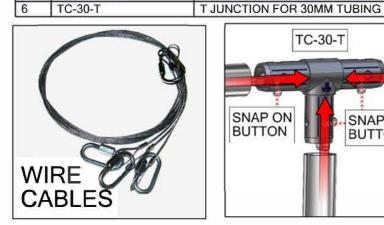

SPDR-30-R-2

TC-30-A-100°

TC-30-A-100°-EYEBOLT

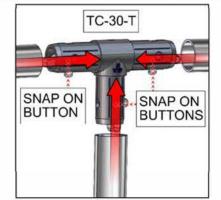



TC-30-A ASSEMBLED at 100° WITH 1/4-20 EYE BOLT


TC-30-A ASSEMBLED at 100°





30MM STRAIGHT SPREADER FOR CORNERS OF 2' STRUCTURES USING RIVETS

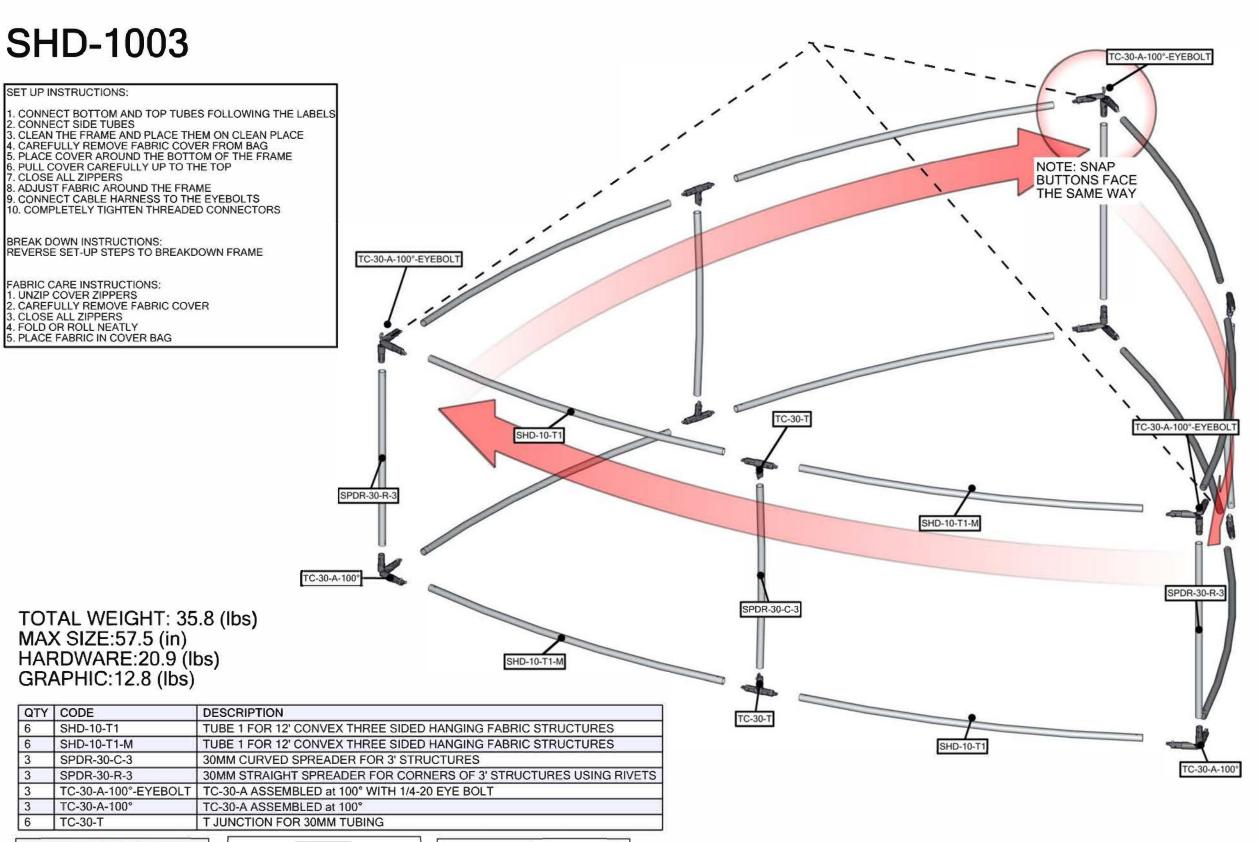

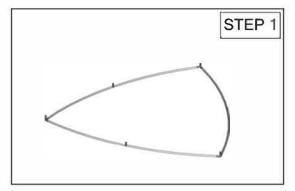


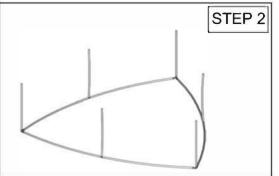

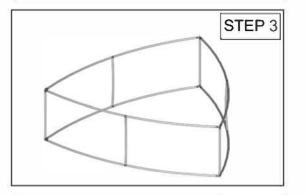


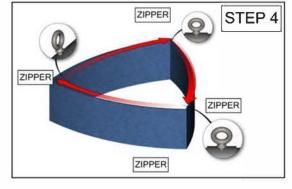



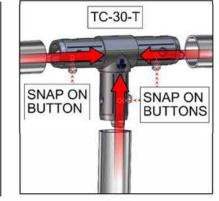



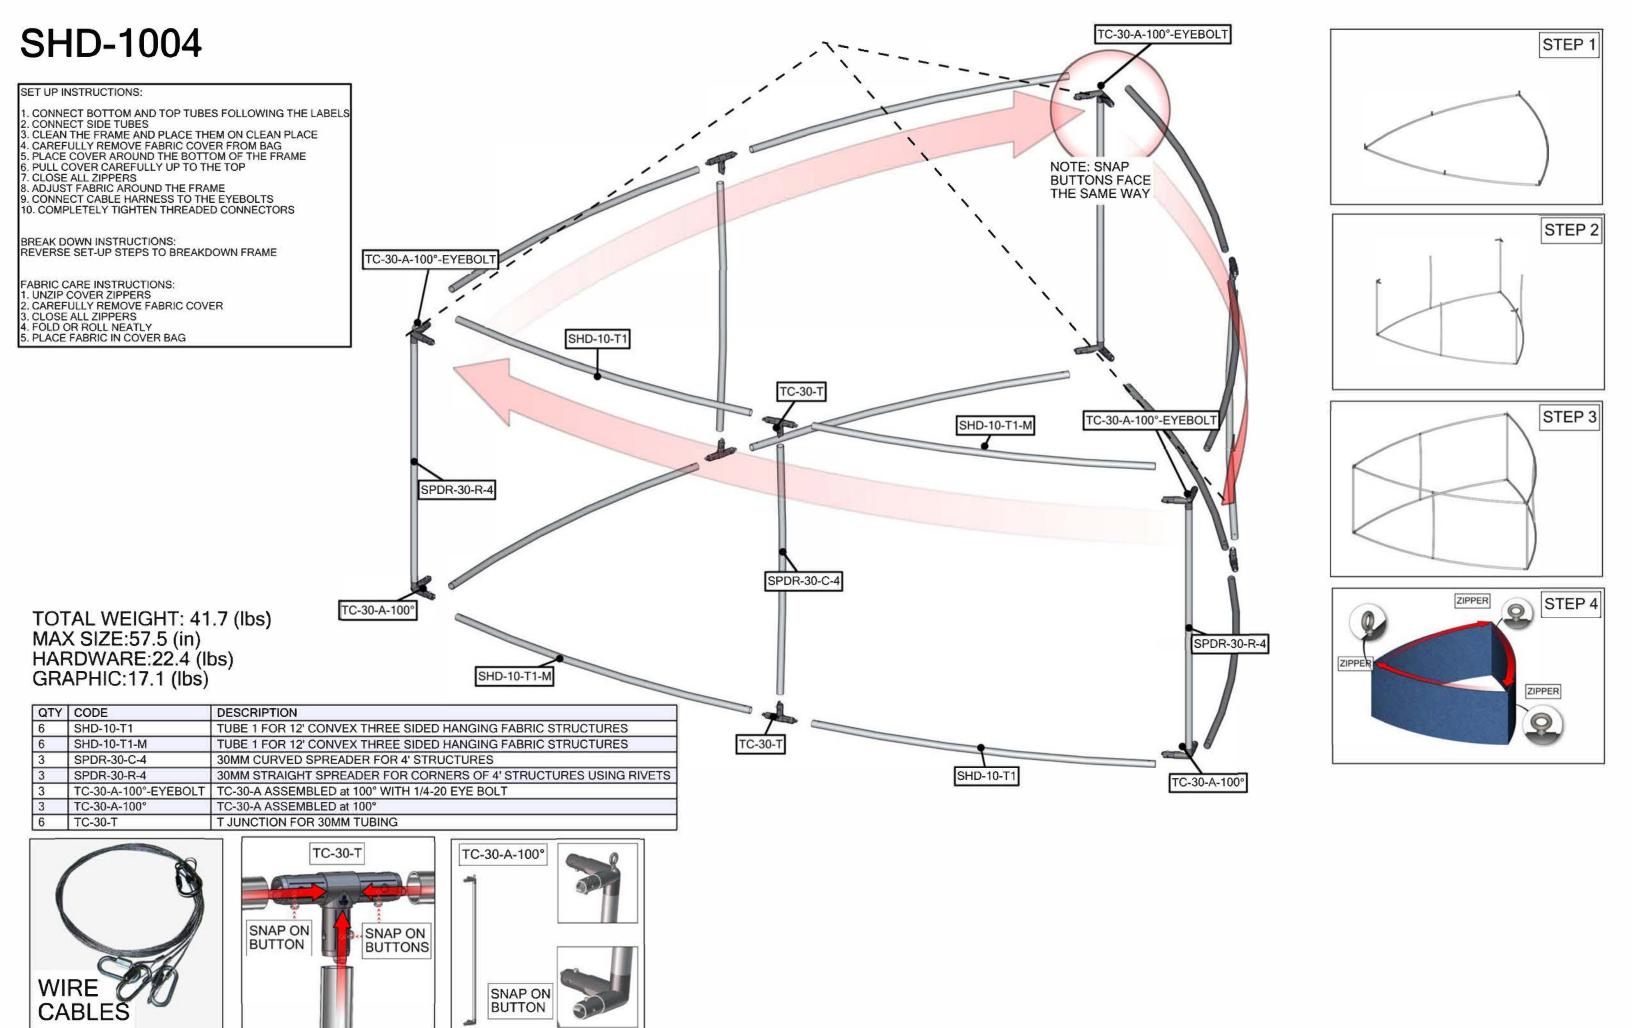

#### SET UP INSTRUCTIONS:

- CONNECT BOTTOM AND TOP TUBES FOLLOWING THE LABELS
- 2. CONNECT SIDE TUBES
- 3. CLEAN THE FRAME AND PLACE THEM ON CLEAN PLACE
- CAREFULLY REMOVE FABRIC COVER FROM BAG
   PLACE COVER AROUND THE BOTTOM OF THE FRAME
   PULL COVER CAREFULLY UP TO THE TOP
- CLOSE ALL ZIPPERS
- 8. ADJUST FABRIC AROUND THE FRAME
  9. CONNECT CABLE HARNESS TO THE EYEBOLTS 10. COMPLETELY TIGHTEN THREADED CONNECTORS

BREAK DOWN INSTRUCTIONS: REVERSE SET-UP STEPS TO BREAKDOWN FRAME

FABRIC CARE INSTRUCTIONS: 1. UNZIP COVER ZIPPERS 2. CAREFULLY REMOVE FABRIC COVER

- CLOSE ALL ZIPPERS
- 4. FOLD OR ROLL NEATLY

QTY CODE

SHD-10-T1

SHD-10-T1-M

SPDR-30-C-5


SPDR-30-R-5


TC-30-A-100°


TC-30-A-100°-EYEBOLT


PLACE FABRIC IN COVER BAG


TOTAL WEIGHT: 47.6 (lbs) MAX SIZE:57.5 (in) HARDWARE:23.9 (lbs) GRAPHIC:21.3 (lbs)

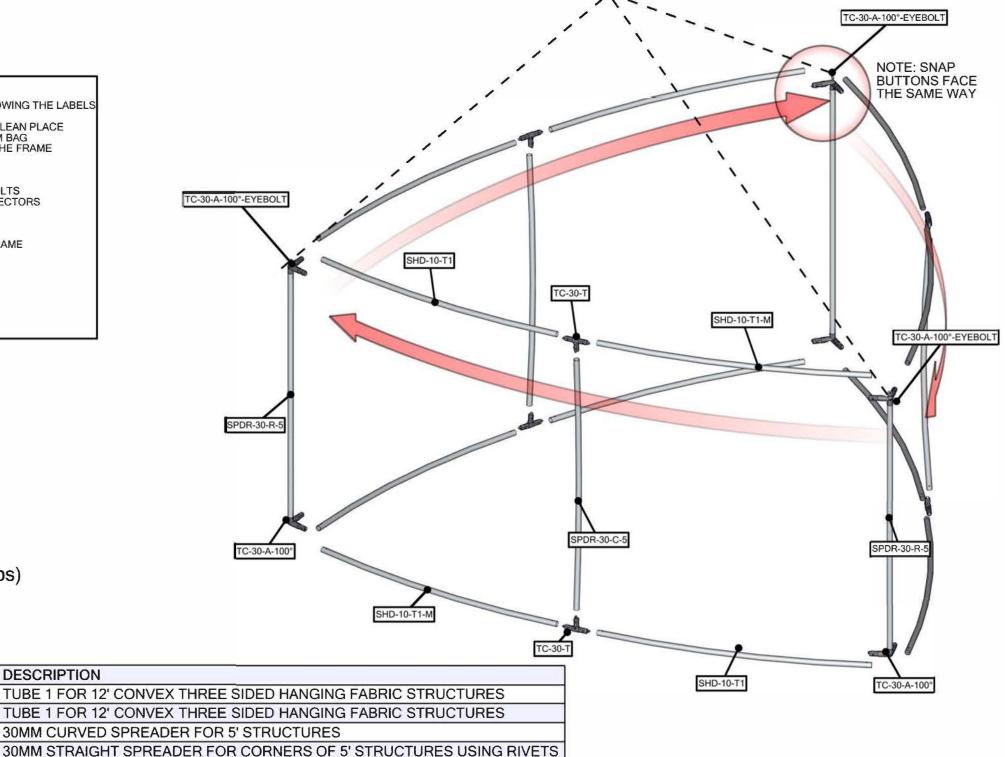


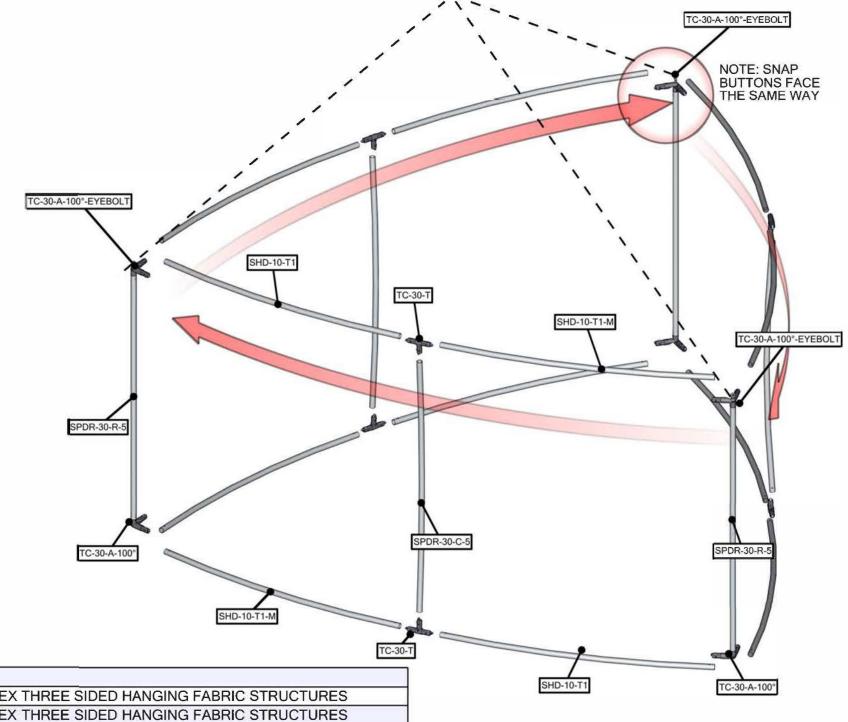

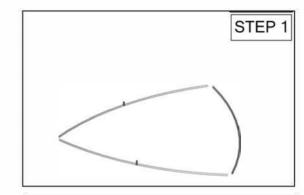


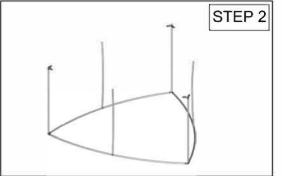

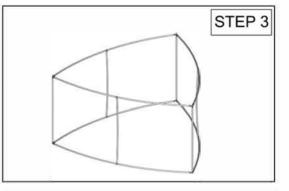

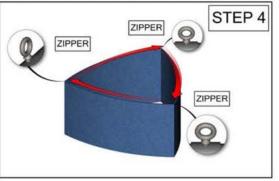



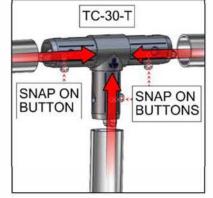

TC-30-A ASSEMBLED at 100°

T JUNCTION FOR 30MM TUBING

TC-30-A ASSEMBLED at 100° WITH 1/4-20 EYE BOLT

**DESCRIPTION** 



SET UP INSTRUCTIONS:

1. CONNECT BOTTOM AND TOP TUBES FOLLOWING THE LABELS 2. CONNECT SIDE TUBES 3. CLEAN THE FRAME AND PLACE THEM ON CLEAN PLACE 4. CAREFULLY REMOVE FABRIC COVER FROM BAG 5. PLACE COVER AROUND THE BOTTOM OF THE FRAME 6. PULL COVER CAREFULLY UP TO THE TOP 7. CLOSE ALL ZIPPERS 8. ADJUST FABRIC AROUND THE FRAME 9. CONNECT CABLE HARNESS TO THE EYEBOLTS 10. COMPLETELY TIGHTEN THREADED CONNECTORS

BREAK DOWN INSTRUCTIONS: REVERSE SET-UP STEPS TO BREAKDOWN FRAME

FABRIC CARE INSTRUCTIONS:

1. UNZIP COVER ZIPPERS


2. CAREFULLY REMOVE FABRIC COVER

3. CLOSE ALL ZIPPERS

4. FOLD OR ROLL NEATLY

5. PLACE FABRIC IN COVER BAG


TOTAL WEIGHT:54.0 (lbs) MAX SIZE:57.5 (in) HARDWARE:25.8 (lbs) GRAPHIC:25.6 (lbs)

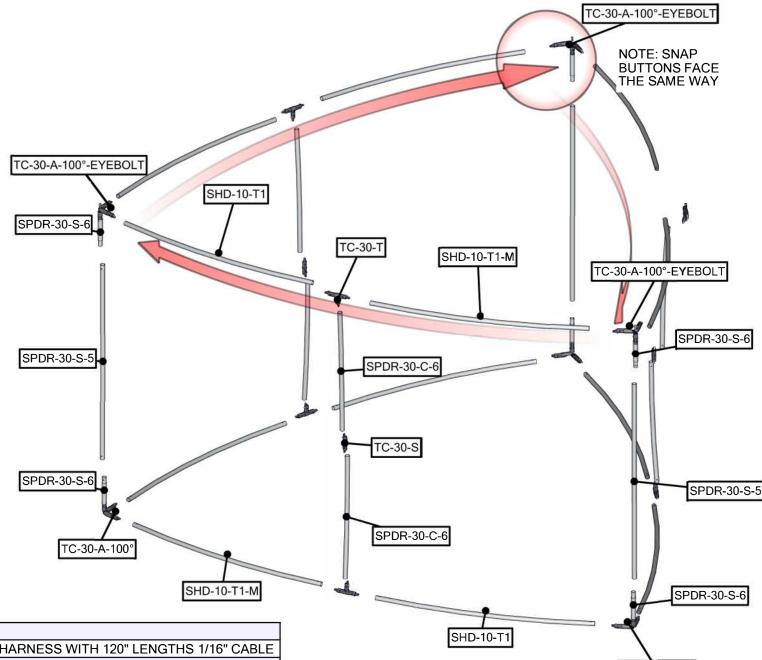


TC-30-A-100°


	,	
QTY	CODE	DESCRIPTION
1	CH-SP3-LD-10	3-CABLE SINGLE POINT LIGHT DUTY HARNESS WITH 120" LENGTHS 1/16" CABLE
6	SHD-10-T1	TUBE 1 FOR 12' CONVEX THREE SIDED HANGING FABRIC STRUCTURES
6	SHD-10-T1-M	TUBE 1 FOR 12' CONVEX THREE SIDED HANGING FABRIC STRUCTURES
6	SPDR-30-C-6	30MM CURVED SPREADER FOR 6' STRUCTURES
3	SPDR-30-S-5	30MM STRAIGHT SPREADER FOR CORNERS OF 5' HIGH STRUCTURES
6	SPDR-30-S-6	30MM STRAIGHT SPREADER FOR CORNERS OF 6' HIGH STRUCTURES
3	TC-30-A-100°-EYEBOLT	TC-30-A ASSEMBLED at 100° WITH 1/4-20 EYE BOLT
3	TC-30-A-100°	TC-30-A ASSEMBLED at 100°
3	TC-30-S	INLINE CONNECTOR FOR 30MM TUBING
6	TC-30-T	T JUNCTION FOR 30MM TUBING




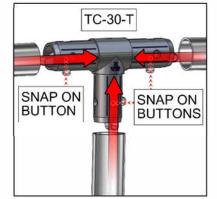





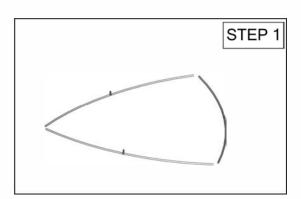


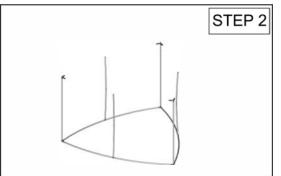


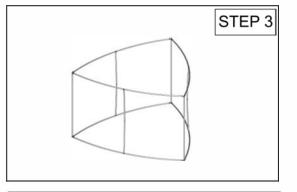


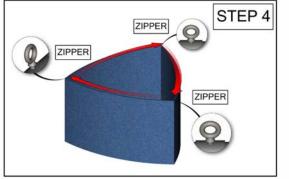


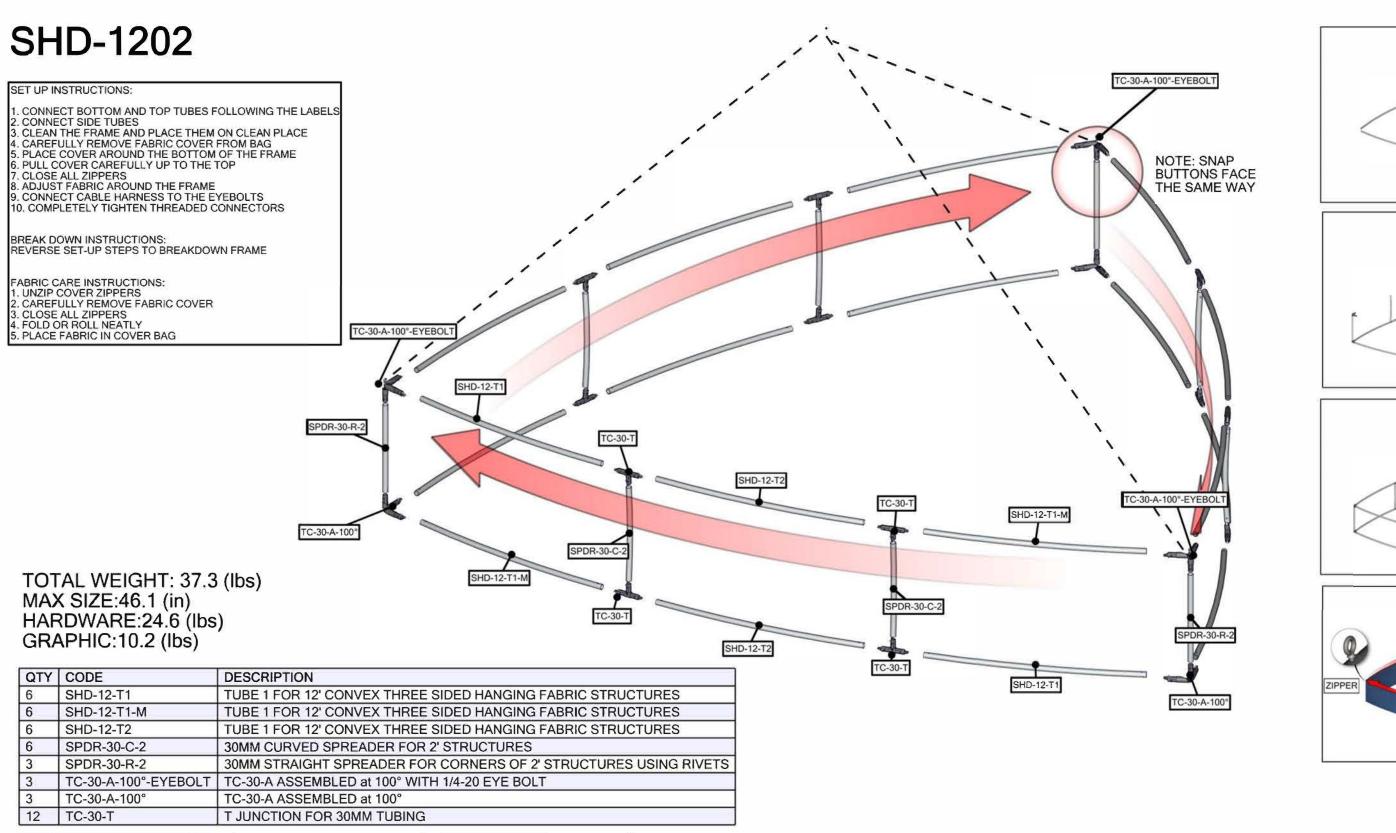

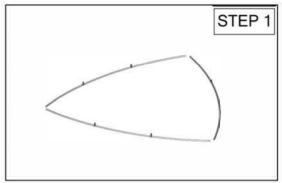


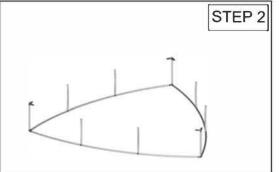

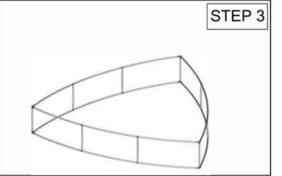

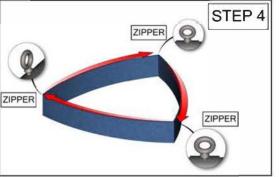



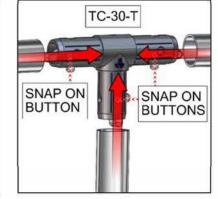



4. FOLD OR ROLL NEATLY

5. PLACE FABRIC IN COVER BAG


SET UP INSTRUCTIONS:


1. CONNECT BOTTOM AND TOP TUBES FOLLOWING THE LABELS 2. CONNECT SIDE TUBES
3. CLEAN THE FRAME AND PLACE THEM ON CLEAN PLACE 4. CAREFULLY REMOVE FABRIC COVER FROM BAG 5. PLACE COVER AROUND THE BOTTOM OF THE FRAME 6. PULL COVER CAREFULLY UP TO THE TOP 7. CLOSE ALL ZIPPERS 8. ADJUST FABRIC AROUND THE FRAME 9. CONNECT CABLE HARNESS TO THE EYEBOLTS 10. COMPLETELY TIGHTEN THREADED CONNECTORS


BREAK DOWN INSTRUCTIONS:
REVERSE SET-UP STEPS TO BREAKDOWN FRAME


FABRIC CARE INSTRUCTIONS:
1. UNZIP COVER ZIPPERS 2. CAREFULLY REMOVE FABRIC COVER 3. CLOSE ALL ZIPPERS


TOTAL WEIGHT:44.9 (lbs) MAX SIZE:46.1 (in) HARDWARE:26.8 (lbs) GRAPHIC:15.4 (lbs)

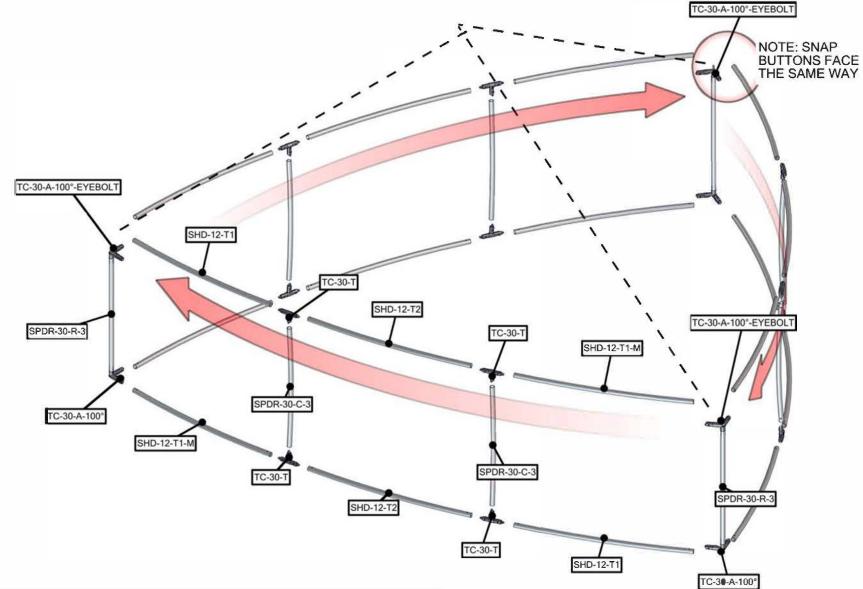

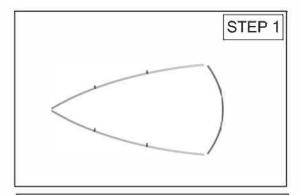

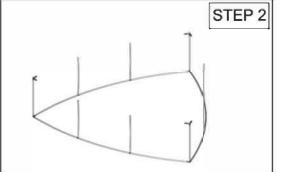


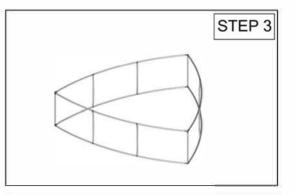

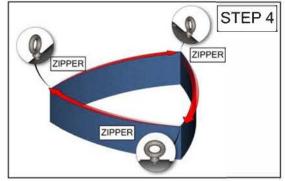


QTY	CODE	DESCRIPTION
6	SHD-12-T1	TUBE 1 FOR 12' CONVEX THREE SIDED HANGING FABRIC STRUCTURES
6	SHD-12-T1-M	TUBE 1 FOR 12' CONVEX THREE SIDED HANGING FABRIC STRUCTURES
6	SHD-12-T2	TUBE 1 FOR 12' CONVEX THREE SIDED HANGING FABRIC STRUCTURES
6	SPDR-30-C-3	30MM CURVED SPREADER FOR 3' STRUCTURES
3	SPDR-30-R-3	30MM STRAIGHT SPREADER FOR CORNERS OF 3' STRUCTURES USING RIVETS
3	TC-30-A-100°-EYEBOLT	TC-30-A ASSEMBLED at 100° WITH 1/4-20 EYE BOLT
3	TC-30-A-100°	TC-30-A ASSEMBLED at 100°
12	TC-30-T	T JUNCTION FOR 30MM TUBING



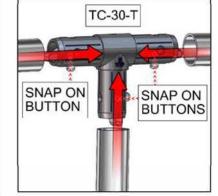




# SHD-1204 SET UP INSTRUCTIONS:

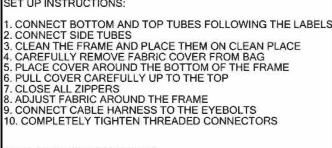

BREAK DOWN INSTRUCTIONS: REVERSE SET-UP STEPS TO BREAKDOWN FRAME

FABRIC CARE INSTRUCTIONS: UNZIP COVER ZIPPERS
 CAREFULLY REMOVE FABRIC COVER 3. CLOSE ALL ZIPPERS 4. FOLD OR ROLL NEATLY 5. PLACE FABRIC IN COVER BAG

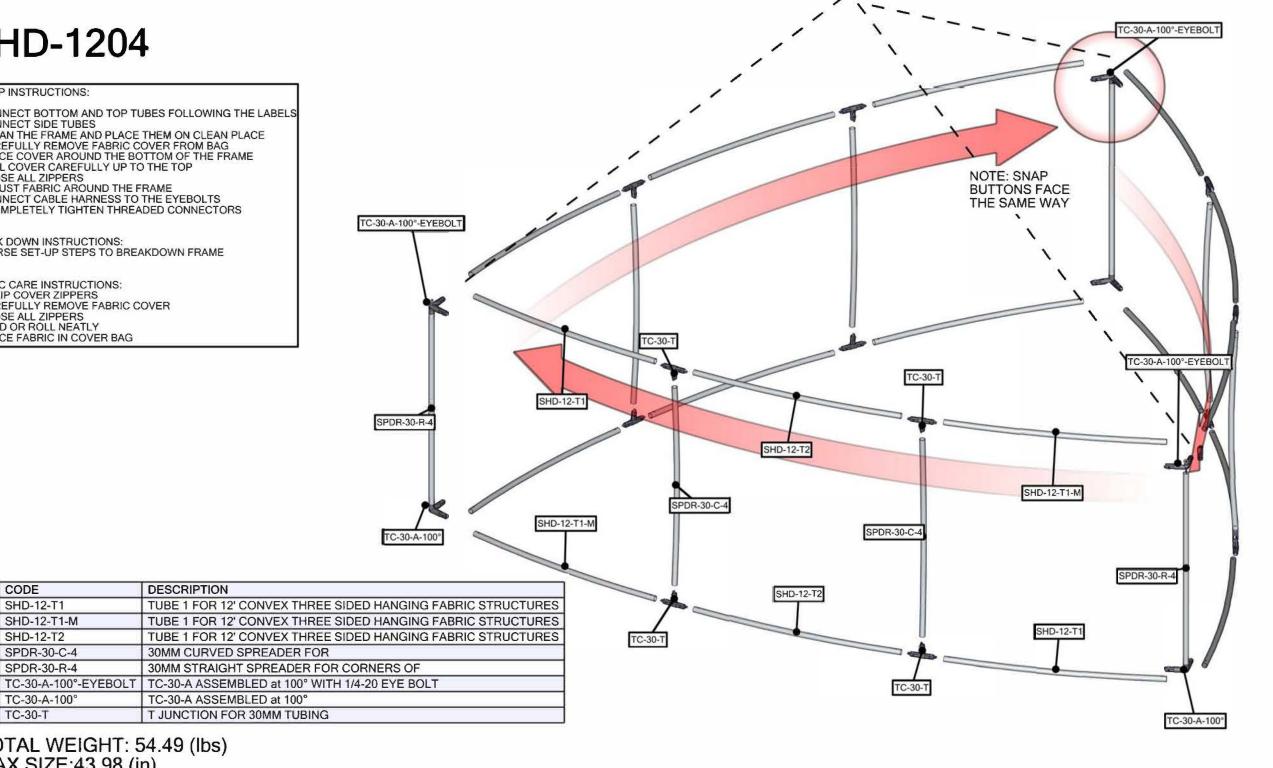

TOTAL WEIGHT: 54.49 (lbs) MAX SIZE:43.98 (in) HARDWARE:29.04 (lbs)

DESCRIPTION

GRAPHIC:20.5 (lbs)

QTY CODE

12 TC-30-T

SHD-12-T1

SHD-12-T2


SHD-12-T1-M

SPDR-30-C-4


SPDR-30-R-4


TC-30-A-100°




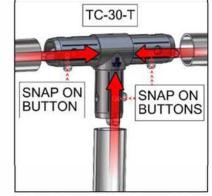




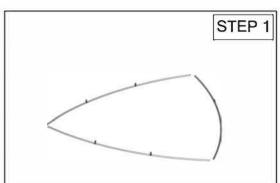

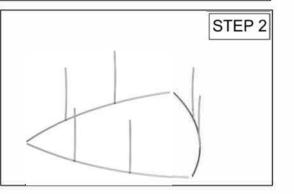

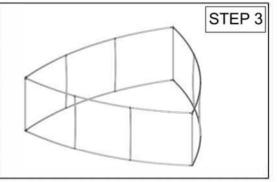

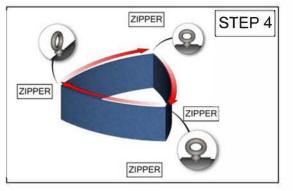

SET UP INSTRUCTIONS:

1. CONNECT BOTTOM AND TOP TUBES FOLLOWING THE LABELS 2. CONNECT SIDE TUBES

3. CLEAN THE FRAME AND PLACE THEM ON CLEAN PLACE
4. CAREFULLY REMOVE FABRIC COVER FROM BAG
5. PLACE COVER AROUND THE BOTTOM OF THE FRAME
6. PULL COVER CAREFULLY UP TO THE TOP
7. CLOSE ALL ZIPPERS

8. ADJUST FABRIC AROUND THE FRAME
9. CONNECT CABLE HARNESS TO THE EYEBOLTS
10. COMPLETELY TIGHTEN THREADED CONNECTORS

BREAK DOWN INSTRUCTIONS:

REVERSE SET-UP STEPS TO BREAKDOWN FRAME


FABRIC CARE INSTRUCTIONS:
1. UNZIP COVER ZIPPERS
2. CAREFULLY REMOVE FABRIC COVER


3. CLOSE ALL ZIPPERS


4. FOLD OR ROLL NEATLY


5. PLACE FABRIC IN COVER BAG


TC-30-A-100°-EYEBOLT NOTE: SNAP BUTTONS FACE THE SAME WAY TC-30-A-100°-EYEBOLT SHD-12-T1 TC-30-T SHD-12-T2 SHD-12-T1-M TC-30-A-100°-EYEBOLT SPDR-30-R-5 SPDR-30-C-5 TC-30-A-100° SHD-12-T1-M SPDR-30-C-5 TC-30-T SPDR-30-R-SHD-12-T2 TC-30-T SHD-12-T1 TC-30-A-100°

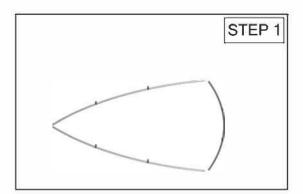

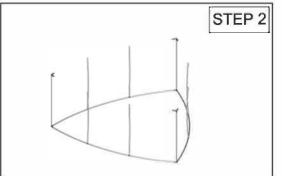

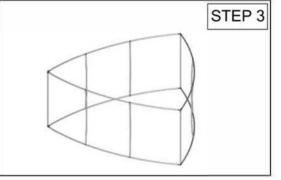


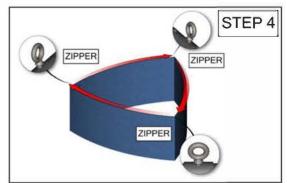



QTY	CODE	DESCRIPTION
6	SHD-12-T1	TUBE 1 FOR 12' CONVEX THREE SIDED HANGING FABRIC STRUCTURES
6	SHD-12-T1-M	TUBE 1 FOR 12' CONVEX THREE SIDED HANGING FABRIC STRUCTURES
6	SHD-12-T2	TUBE 1 FOR 12' CONVEX THREE SIDED HANGING FABRIC STRUCTURES
6	SPDR-30-C-5	30MM CURVED SPREADER FOR 5' STRUCTURES
3	SPDR-30-R-5	30MM STRAIGHT SPREADER FOR CORNERS OF 5' STRUCTURES USING RIVETS
3	TC-30-A-100°	TC-30-A ASSEMBLED at 100°
3	TC-30-A-100°-EYEBOLT	TC-30-A ASSEMBLED at 100° WITH 1/4-20 EYE BOLT
12	TC-30-T	T JUNCTION FOR 30MM TUBING



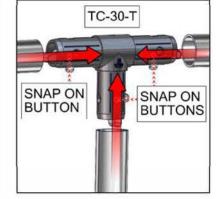



#### SET UP INSTRUCTIONS:

- 1. CONNECT BOTTOM AND TOP TUBES FOLLOWING THE LABELS 2. CONNECT SIDE TUBES
- 3. CLEAN THE FRAME AND PLACE THEM ON CLEAN PLACE
  4. CAREFULLY REMOVE FABRIC COVER FROM BAG
  5. PLACE COVER AROUND THE BOTTOM OF THE FRAME
  6. PULL COVER CAREFULLY UP TO THE TOP


- 7. CLOSE ALL ZIPPERS


- 8. ADJUST FABRIC AROUND THE FRAME
  9. CONNECT CABLE HARNESS TO THE EYEBOLTS
  10. COMPLETELY TIGHTEN THREADED CONNECTORS


BREAK DOWN INSTRUCTIONS: REVERSE SET-UP STEPS TO BREAKDOWN FRAME


FABRIC CARE INSTRUCTIONS:


- 1. UNZIP COVER ZIPPERS
- 2. CAREFULLY REMOVE FABRIC COVER
- 3. CLOSE ALL ZIPPERS
- 4. FOLD OR ROLL NEATLY
  5. PLACE FABRIC IN COVER BAG

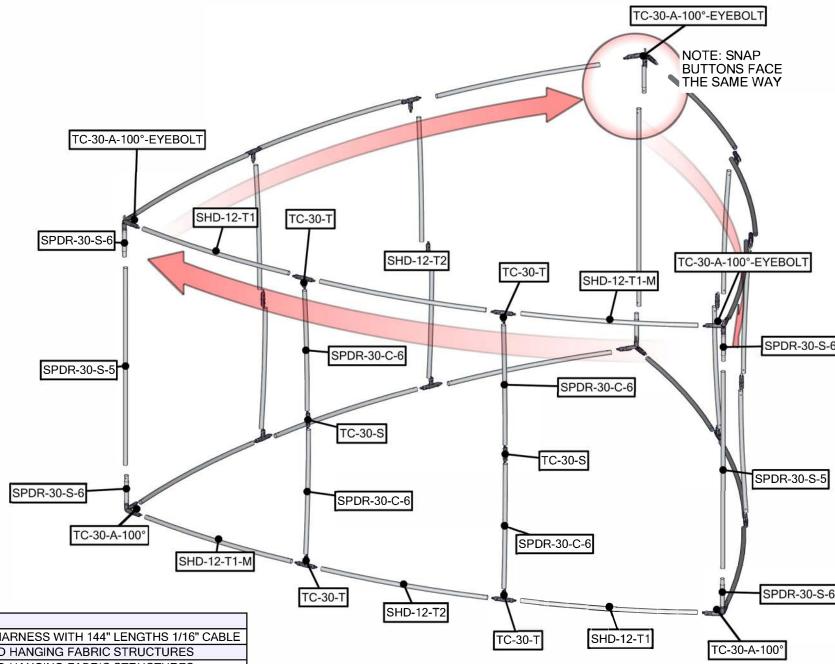


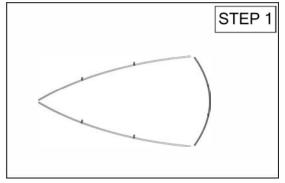

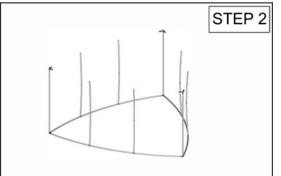

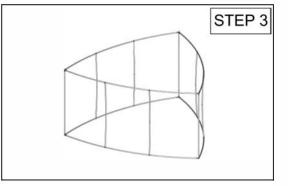


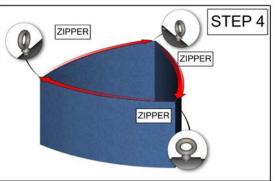



QTY	CODE	DESCRIPTION
1	CH-SP3-LD-12	3-CABLE SINGLE POINT LIGHT DUTY HARNESS WITH 144" LENGTHS 1/16" CABLE
6	SHD-12-T1	TUBE 1 FOR 12' CONVEX THREE SIDED HANGING FABRIC STRUCTURES
6	SHD-12-T1-M	TUBE 1 FOR 12' CONVEX THREE SIDED HANGING FABRIC STRUCTURES
6	SHD-12-T2	TUBE 1 FOR 12' CONVEX THREE SIDED HANGING FABRIC STRUCTURES
12	SPDR-30-C-6	30MM CURVED SPREADER FOR 6' STRUCTURES
3	SPDR-30-S-5	30MM STRAIGHT SPREADER FOR CORNERS OF 5' HIGH STRUCTURES
6	SPDR-30-S-6	30MM STRAIGHT SPREADER FOR CORNERS OF 6' HIGH STRUCTURES
6	TC-30-S	INLINE CONNECTOR FOR 30MM TUBING
3	TC-30-A-100°-EYEBOLT	TC-30-A ASSEMBLED at 100° WITH 1/4-20 EYE BOLT
3	TC-30-A-100°	TC-30-A ASSEMBLED at 100°
12	TC-30-T	T JUNCTION FOR 30MM TUBING



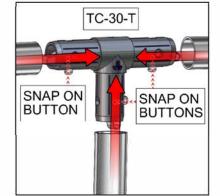



SET UP INSTRUCTIONS:

1. CONNECT BOTTOM AND TOP TUBES FOLLOWING THE LABELS
2. CONNECT SIDE TUBES
3. CLEAN THE FRAME AND PLACE THEM ON CLEAN PLACE
4. CAREFULLY REMOVE FABRIC COVER FROM BAG
5. PLACE COVER AROUND THE BOTTOM OF THE FRAME
6. PULL COVER CAREFULLY UP TO THE TOP
7. CLOSE ALL ZIPPERS
8. ADJUST FABRIC AROUND THE FRAME
9. CONNECT CABLE HARNESS TO THE EYEBOLTS
10. COMPLETELY TIGHTEN THREADED CONNECTORS

BREAK DOWN INSTRUCTIONS: REVERSE SET-UP STEPS TO BREAKDOWN FRAME

FABRIC CARE INSTRUCTIONS:

1. UNZIP COVER ZIPPERS


2. CAREFULLY REMOVE FABRIC COVER


3. CLOSE ALL ZIPPERS


4. FOLD OR ROLL NEATLY


5. PLACE FABRIC IN COVER BAG

FRAME ASSEMBLY 23 30 22

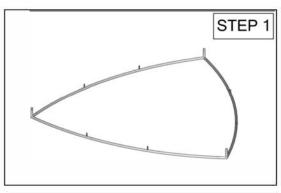

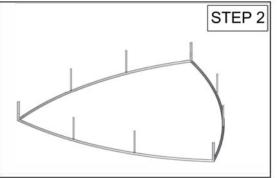

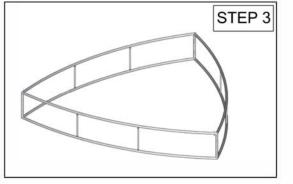


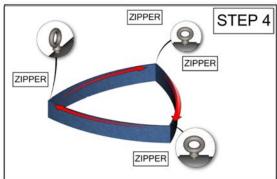

TOTAL WEIGHT: 96.9 (lbs) MAX SIZE:52.6 (in) HARDWARE:77.3 (lbs) GRAPHIC:11.9 (lbs)


QTY	CODE	DESCRIPTION
3	EYE BOLT	5/16-18X3.125" PARTIALLY THREADED EYE BOLT FOR 2" TUBING FABRIC STRUCTURES
1	CH-SP3-HD-12	3-CABLE SINGLE POINT HEAVY DUTY HARNESS WITH 144" LENGTHS 1/8" CABLE
6	CORNER-50-100°	3 WAY WELDED CORNER MADE FROM 2" TUBING (100°)
30	ES-50	EXPANDING SPIGOT FOR 50MM TUBE
18	SHD-14-T1	TUBE 1 FOR 12' CONVEX THREE SIDED HANGING FABRIC STRUCTURES
6	SPDR-30-S2-2	30MM STRAIGHT SPREADER FOR 50MM CONNECTIONS OF 2' STRUCTURES
3	SPDR-50-S2-2	2" TUBING SPREADER FOR 2' HIGH FOR FOUR SIDED HANGING FABRIC STRUCTURES




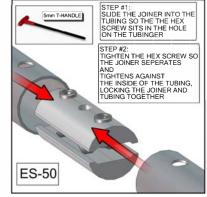








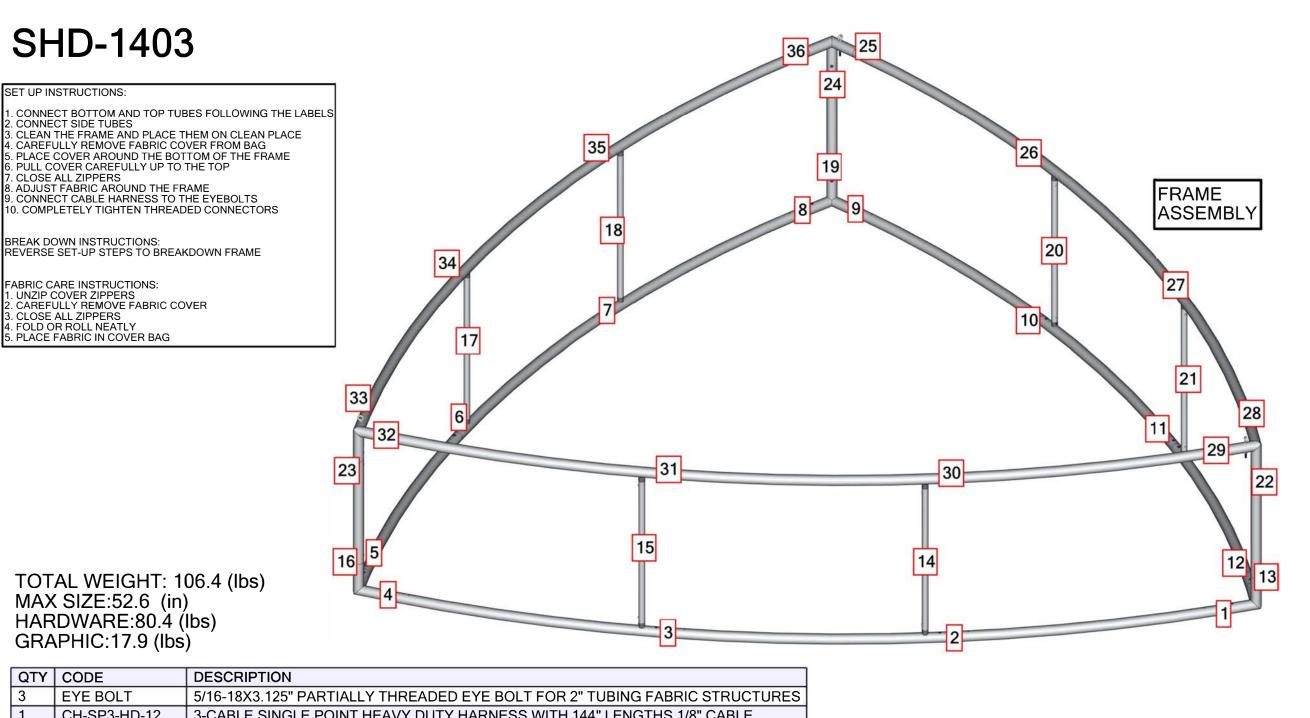


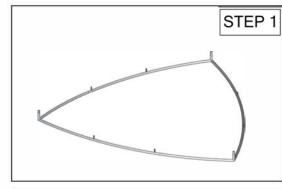

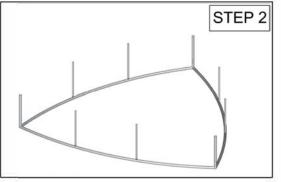


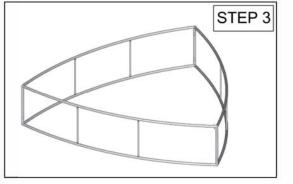


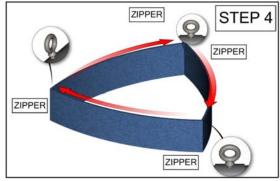

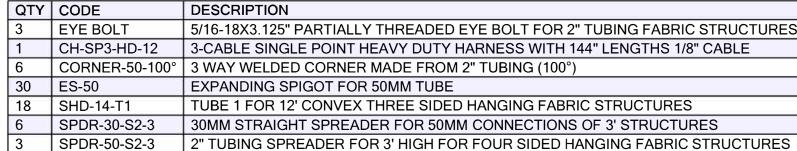



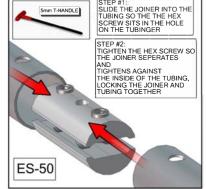

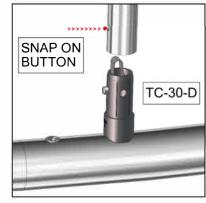



SET UP INSTRUCTIONS:

1. CONNECT BOTTOM AND TOP TUBES FOLLOWING THE LABELS
2. CONNECT SIDE TUBES
3. CLEAN THE FRAME AND PLACE THEM ON CLEAN PLACE
4. CAREFULLY REMOVE FABRIC COVER FROM BAG
5. PLACE COVER AROUND THE BOTTOM OF THE FRAME
6. PULL COVER CAREFULLY UP TO THE TOP
7. CLOSE ALL ZIPPERS
8. ADJUST FABRIC AROUND THE FRAME
9. CONNECT CABLE HARNESS TO THE EYEBOLTS
10. COMPLETELY TIGHTEN THREADED CONNECTORS

BREAK DOWN INSTRUCTIONS: REVERSE SET-UP STEPS TO BREAKDOWN FRAME

FABRIC CARE INSTRUCTIONS:


1. UNZIP COVER ZIPPERS

2. CAREFULLY REMOVE FABRIC COVER


3. CLOSE ALL ZIPPERS


4. FOLD OR ROLL NEATLY


5. PLACE FABRIC IN COVER BAG

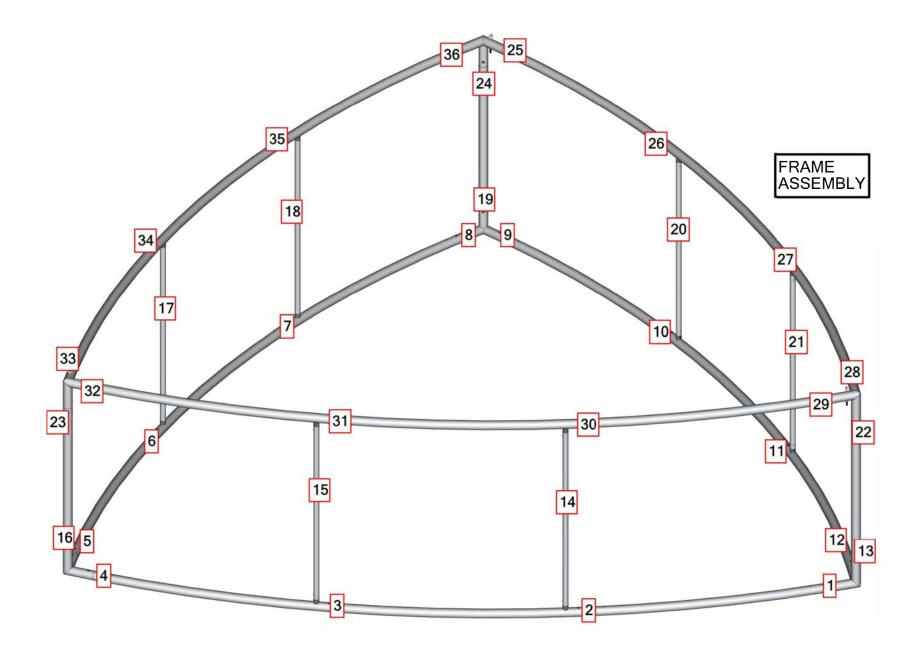

STEP 1

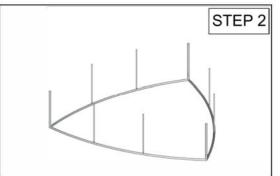

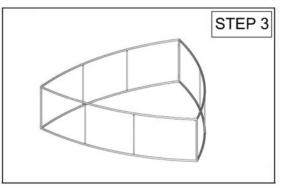


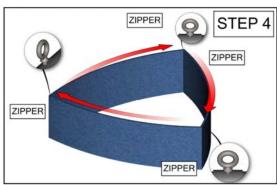



TOTAL WEIGHT: 115.9 (lbs) MAX SIZE:52.6 (in) HARDWARE; 83.6 (lbs) GRAPHIC:12.9 (lbs)

QTY	CODE	DESCRIPTION
3	EYE BOLT	5/16-18X3.125" PARTIALLY THREADED EYE BOLT FOR 2" TUBING FABRIC STRUCTURES
1	CH-SP3-HD-12	3-CABLE SINGLE POINT HEAVY DUTY HARNESS WITH 144" LENGTHS 1/8" CABLE
6	CORNER-50-100°	3 WAY WELDED CORNER MADE FROM 2" TUBING (100°)
30	ES-50	EXPANDING SPIGOT FOR 50MM TUBE
18	SHD-14-T1	TUBE 1 FOR 12' CONVEX THREE SIDED HANGING FABRIC STRUCTURES
6	SPDR-30-S2-4	30MM STRAIGHT SPREADER FOR 50MM CONNECTIONS OF 4' STRUCTURES
3	SPDR-50-S2-4	2" TUBING SPREADER FOR 4' HIGH FOR FOUR SIDED HANGING FABRIC STRUCTURES



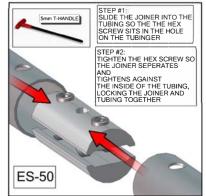

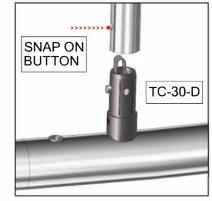

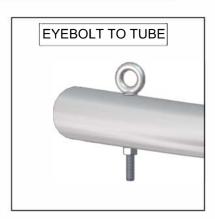

SET UP INSTRUCTIONS:

1. CONNECT BOTTOM AND TOP TUBES FOLLOWING THE LABELS
2. CONNECT SIDE TUBES
3. CLEAN THE FRAME AND PLACE THEM ON CLEAN PLACE
4. CAREFULLY REMOVE FABRIC COVER FROM BAG
5. PLACE COVER AROUND THE BOTTOM OF THE FRAME
6. PULL COVER CAREFULLY UP TO THE TOP
7. CLOSE ALL ZIPPERS
8. ADJUST FABRIC AROUND THE FRAME
9. CONNECT CABLE HARNESS TO THE EYEBOLTS
10. COMPLETELY TIGHTEN THREADED CONNECTORS

BREAK DOWN INSTRUCTIONS: REVERSE SET-UP STEPS TO BREAKDOWN FRAME

FABRIC CARE INSTRUCTIONS:


1. UNZIP COVER ZIPPERS


2. CAREFULLY REMOVE FABRIC COVER


3. CLOSE ALL ZIPPERS


4. FOLD OR ROLL NEATLY


5. PLACE FABRIC IN COVER BAG

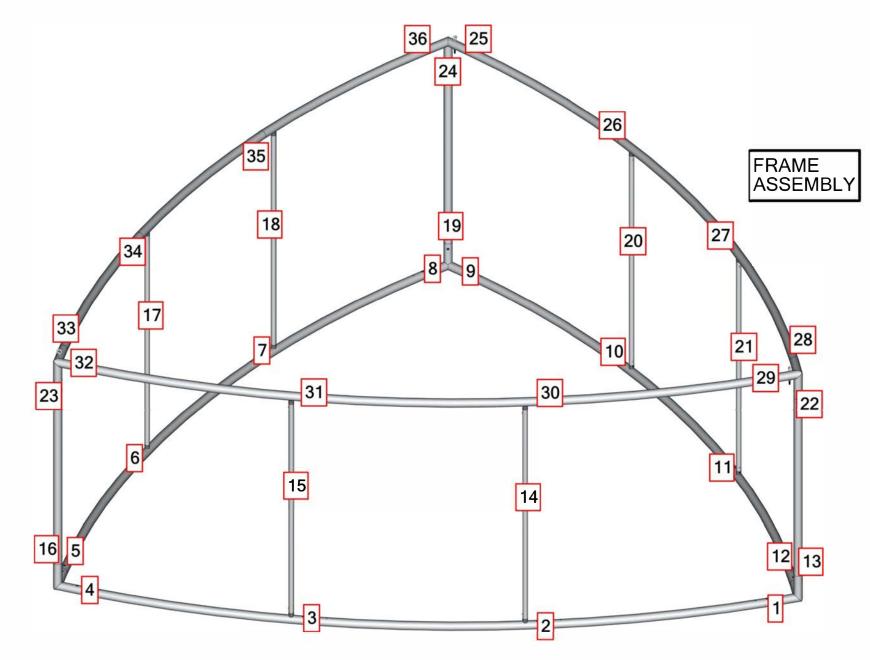

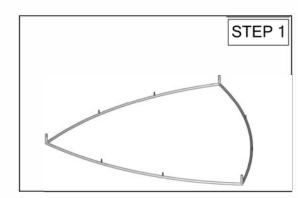

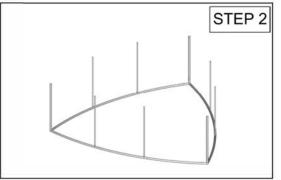

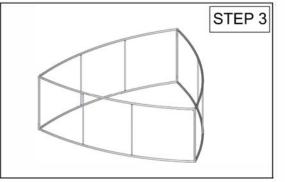


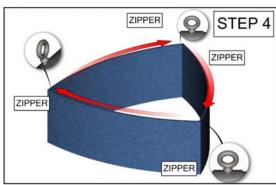


TOTAL WEIGHT: 125.3 (lbs) MAX SIZE: 54.4 (in) HARDWARE; 86.8 (lbs) GRAPHIC:29.9 (lbs)

QTY	CODE	DESCRIPTION
3	EYE BOLT	5/16-18X3.125" PARTIALLY THREADED EYE BOLT FOR 2" TUBING FABRIC STRUCTURES
1	CH-SP3-HD-12	3-CABLE SINGLE POINT HEAVY DUTY HARNESS WITH 144" LENGTHS 1/8" CABLE
6	CORNER-50-100°	3 WAY WELDED CORNER MADE FROM 2" TUBING (100°)
30	ES-50	EXPANDING SPIGOT FOR 50MM TUBE
18	SHD-14-T1	TUBE 1 FOR 12' CONVEX THREE SIDED HANGING FABRIC STRUCTURES
6	SPDR-30-S2-5	30MM STRAIGHT SPREADER FOR 50MM CONNECTIONS OF 5' STRUCTURES
3	SPDR-50-S2-5	2" TUBING SPREADER FOR 5' HIGH FOR FOUR SIDED HANGING FABRIC STRUCTURES



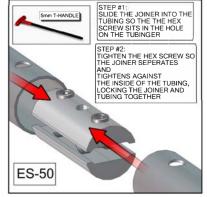

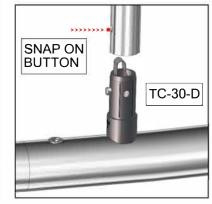




#### SET UP INSTRUCTIONS:


- 1. CONNECT BOTTOM AND TOP TUBES FOLLOWING THE LABELS
  2. CONNECT SIDE TUBES
  3. CLEAN THE FRAME AND PLACE THEM ON CLEAN PLACE
  4. CAREFULLY REMOVE FABRIC COVER FROM BAG
  5. PLACE COVER AROUND THE BOTTOM OF THE FRAME
  6. PULL COVER CAREFULLY UP TO THE TOP
  7. CLOSE ALL ZIPPERS
  8. ADJUST FABRIC AROUND THE FRAME
  9. CONNECT CABLE HARNESS TO THE EYEBOLTS
  10. COMPLETELY TIGHTEN THREADED CONNECTORS


BREAK DOWN INSTRUCTIONS: REVERSE SET-UP STEPS TO BREAKDOWN FRAME


- FABRIC CARE INSTRUCTIONS:
  1. UNZIP COVER ZIPPERS
  2. CAREFULLY REMOVE FABRIC COVER
  3. CLOSE ALL ZIPPERS


- 4. FOLD OR ROLL NEATLY
  5. PLACE FABRIC IN COVER BAG

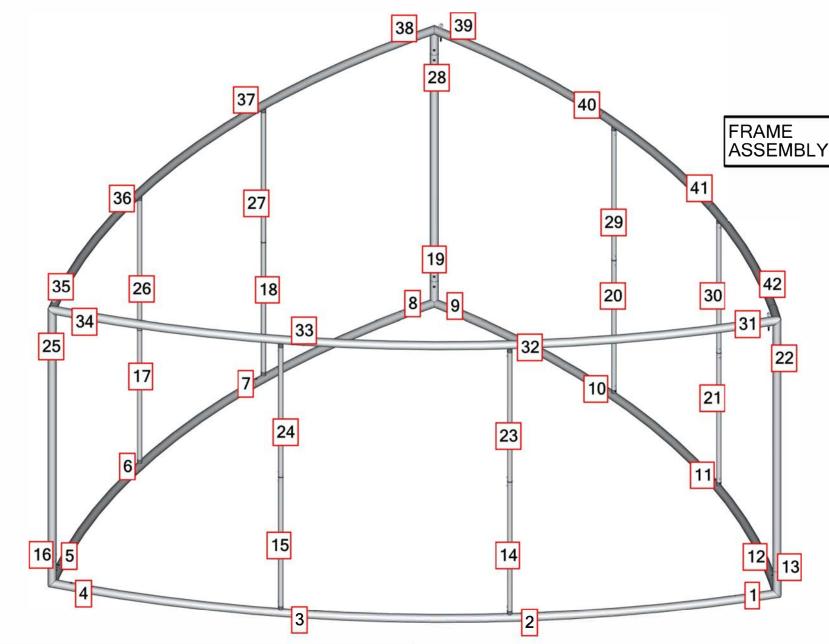

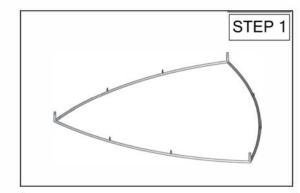

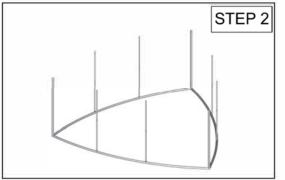

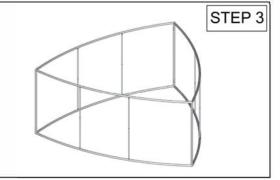


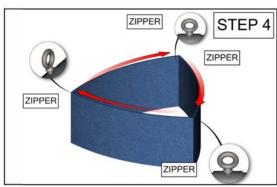


TOTAL WEIGHT: 135.3 (lbs) MAX SIZE: 58.0 (in) HARDWARE; 90.4 (lbs) GRAPHIC:35.8 (lbs)

QTY	CODE	DESCRIPTION
3	EYE BOLT	5/16-18X3.125" PARTIALLY THREADED EYE BOLT FOR 2" TUBING FABRIC STRUCTURES
1	CH-SP3-HD-12	3-CABLE SINGLE POINT HEAVY DUTY HARNESS WITH 144" LENGTHS 1/8" CABLE
6	CORNER-50-100°	3 WAY WELDED CORNER MADE FROM 2" TUBING (100°)
30	ES-50	EXPANDING SPIGOT FOR 50MM TUBE
18	SHD-14-T1	TUBE 1 FOR 12' CONVEX THREE SIDED HANGING FABRIC STRUCTURES
12	SPDR-30-S2-6	30MM STRAIGHT SPREADER FOR 50MM CONNECTIONS OF 6' STRUCTURES
3	SPDR-50-S2-6	2" TUBING SPREADER FOR 6' HIGH FOR FOUR SIDED HANGING FABRIC STRUCTURES
6	TC-30-S	INLINE CONNECTOR FOR 30MM TUBING




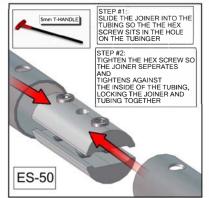

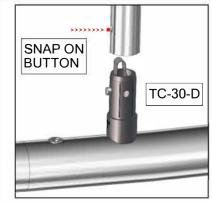



SET UP INSTRUCTIONS:

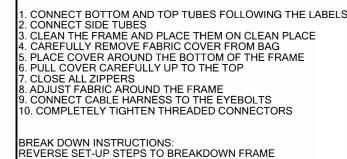

3. CLOSE ALL ZIPPERS 4. FOLD OR ROLL NEATLY 5. PLACE FABRIC IN COVER BAG

FABRIC CARE INSTRUCTIONS: 1. UNZIP COVER ZIPPERS 2. CAREFULLY REMOVE FABRIC COVER

TOTAL WEIGHT: 106.3 (lbs) MAX SIZE:60.8 (in)

CORNER-50-100

HARDWARE:84.2 (lbs) GRAPHIC: 13.7 (lbs) QTY CODE **DESCRIPTION** SPDR-50-S2-2 2" TUBING SPREADER FOR 2' HIGH FOR FOUR SIDED HANGING FABRIC STRUCTURES CH-SP3-HD-14 3-CABLE SINGLE POINT HEAVY DUTY HARNESS WITH 168" LENGTHS 1/8" CABLE **EYE BOLT** 5/16-18X3.125" PARTIALLY THREADED EYE BOLT FOR 2" TUBING FABRIC STRUCTURES 30MM STRAIGHT SPREADER FOR 50MM CONNECTIONS OF 2' STRUCTURES SPDR-30-S2-2

3 WAY WELDED CORNER MADE FROM 2" TUBING (100°)


29

26


27




SHD-16-T1

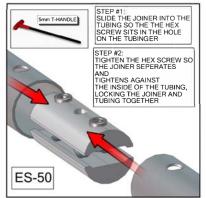



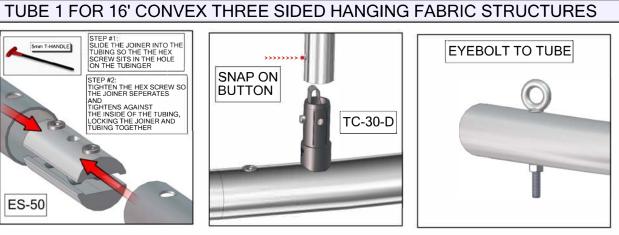



25

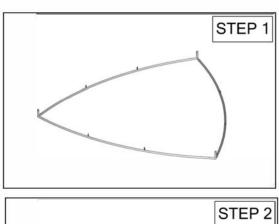

FRAME

**ASSEMBLY** 

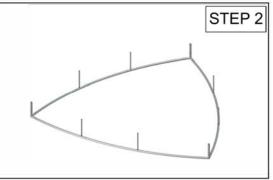

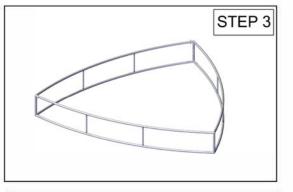


36


22

23

12

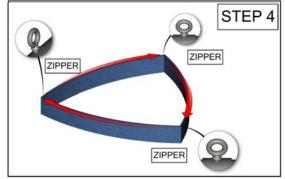

SET UP INSTRUCTIONS:

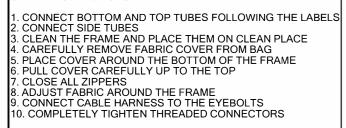

BREAK DOWN INSTRUCTIONS: REVERSE SET-UP STEPS TO BREAKDOWN FRAME

FABRIC CARE INSTRUCTIONS:

1. UNZIP COVER ZIPPERS

2. CAREFULLY REMOVE FABRIC COVER


3. CLOSE ALL ZIPPERS


4. FOLD OR ROLL NEATLY


5. PLACE FABRIC IN COVER BAG

ASSEMBLY 30 20 29 17 21 36 28 26 23 25 27 22 15 13 STEP 1

FRAME

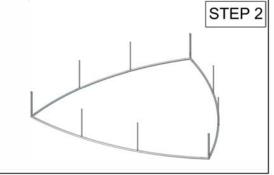

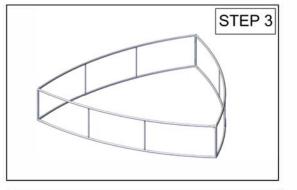

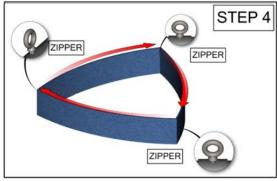


TOTAL WEIGHT: 116.6 (lbs)


MAX SIZE:60.8 (in) HARDWARE: 87.4 (lbs) GRAPHIC:20.5 (lbs)

QTY	CODE	DESCRIPTION
3	SPDR-50-S2-3	2" TUBING SPREADER FOR 3' HIGH FOR FOUR SIDED HANGING FABRIC STRUCTURES
1	CH-SP3-HD-14	3-CABLE SINGLE POINT HEAVY DUTY HARNESS WITH 168" LENGTHS 1/8" CABLE
3	EYE BOLT	5/16-18X3.125" PARTIALLY THREADED EYE BOLT FOR 2" TUBING FABRIC STRUCTURES
6	SPDR-30-S2-3	30MM STRAIGHT SPREADER FOR 50MM CONNECTIONS OF 3' STRUCTURES
6	CORNER-50-100°	3 WAY WELDED CORNER MADE FROM 2" TUBING (100°)
18	SHD-16-T1	TUBE 1 FOR 16' CONVEX THREE SIDED HANGING FABRIC STRUCTURES



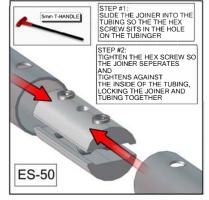



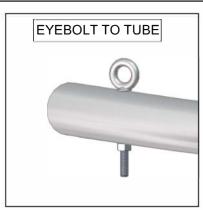

SET UP INSTRUCTIONS:

1. CONNECT BOTTOM AND TOP TUBES FOLLOWING THE LABELS
2. CONNECT SIDE TUBES
3. CLEAN THE FRAME AND PLACE THEM ON CLEAN PLACE
4. CAREFULLY REMOVE FABRIC COVER FROM BAG
5. PLACE COVER AROUND THE BOTTOM OF THE FRAME
6. PULL COVER CAREFULLY UP TO THE TOP
7. CLOSE ALL ZIPPERS
8. ADJUST FABRIC AROUND THE FRAME
9. CONNECT CABLE HARNESS TO THE EYEBOLTS
10. COMPLETELY TIGHTEN THREADED CONNECTORS

BREAK DOWN INSTRUCTIONS: REVERSE SET-UP STEPS TO BREAKDOWN FRAME

FABRIC CARE INSTRUCTIONS:


1. UNZIP COVER ZIPPERS


2. CAREFULLY REMOVE FABRIC COVER


3. CLOSE ALL ZIPPERS


4. FOLD OR ROLL NEATLY


5. PLACE FABRIC IN COVER BAG

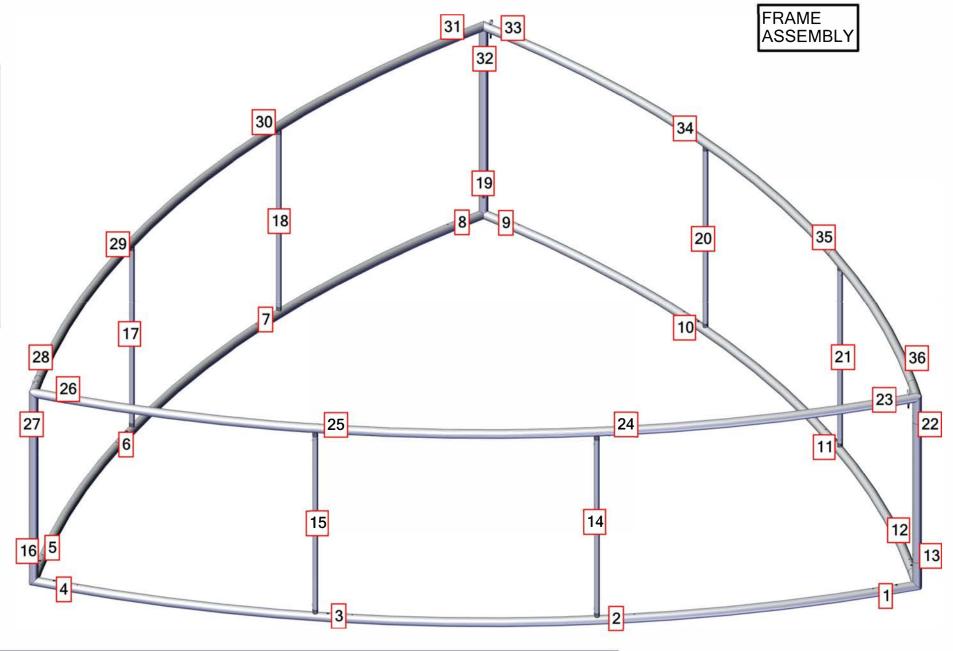

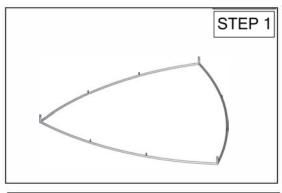

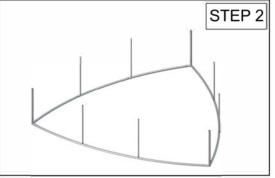

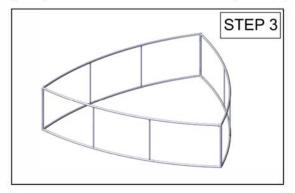

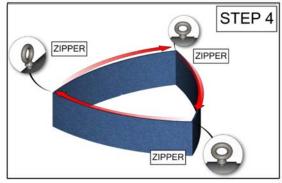


TOTAL WEIGHT: 126.9 (lbs)

MAX SIZE:60.8 (in) HARDWARE: 90.5 (lbs) GRAPHIC:27.3 (lbs)

QTY	CODE	DESCRIPTION
3	SPDR-50-S2-4	2" TUBING SPREADER FOR 4' HIGH FOR FOUR SIDED HANGING FABRIC STRUCTURES
1	CH-SP3-HD-14	3-CABLE SINGLE POINT HEAVY DUTY HARNESS WITH 168" LENGTHS 1/8" CABLE
3	EYE BOLT	5/16-18X3.125" PARTIALLY THREADED EYE BOLT FOR 2" TUBING FABRIC STRUCTURES
6	SPDR-30-S2-4	30MM STRAIGHT SPREADER FOR 50MM CONNECTIONS OF 4' STRUCTURES
6	CORNER-50-100°	3 WAY WELDED CORNER MADE FROM 2" TUBING (100°)
18	SHD-16-T1	TUBE 1 FOR 16' CONVEX THREE SIDED HANGING FABRIC STRUCTURES



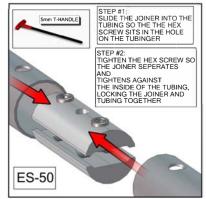





SET UP INSTRUCTIONS:

1. CONNECT BOTTOM AND TOP TUBES FOLLOWING THE LABELS
2. CONNECT SIDE TUBES
3. CLEAN THE FRAME AND PLACE THEM ON CLEAN PLACE
4. CAREFULLY REMOVE FABRIC COVER FROM BAG
5. PLACE COVER AROUND THE BOTTOM OF THE FRAME
6. PULL COVER CAREFULLY UP TO THE TOP
7. CLOSE ALL ZIPPERS
8. ADJUST FABRIC AROUND THE FRAME
9. CONNECT CABLE HARNESS TO THE EYEBOLTS
10. COMPLETELY TIGHTEN THREADED CONNECTORS

BREAK DOWN INSTRUCTIONS: REVERSE SET-UP STEPS TO BREAKDOWN FRAME

FABRIC CARE INSTRUCTIONS:


1. UNZIP COVER ZIPPERS

2. CAREFULLY REMOVE FABRIC COVER

3. CLOSE ALL ZIPPERS

4. FOLD OR ROLL NEATLY

5. PLACE FABRIC IN COVER BAG

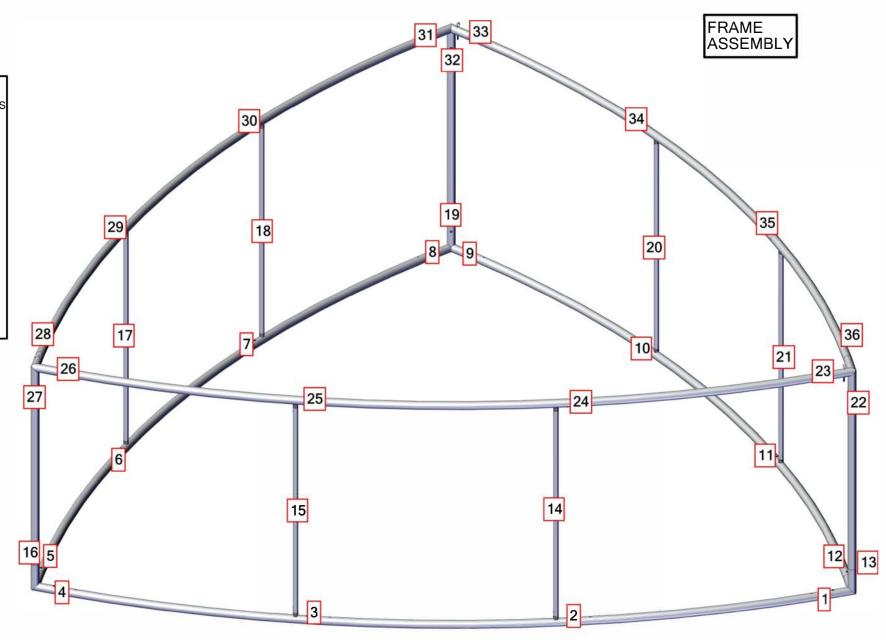



TOTAL WEIGHT: 137.2 (lbs)


MAX SIZE: 60.8 (in) HARDWARE: 93.7 (lbs) GRAPHIC: 34.1 (lbs)


QTY	CODE	DESCRIPTION
3	SPDR-50-S2-5	2" TUBING SPREADER FOR 5' HIGH FOR FOUR SIDED HANGING FABRIC STRUCTURES
1	CH-SP3-HD-14	3-CABLE SINGLE POINT HEAVY DUTY HARNESS WITH 168" LENGTHS 1/8" CABLE
3	EYE BOLT	5/16-18X3.125" PARTIALLY THREADED EYE BOLT FOR 2" TUBING FABRIC STRUCTURES
6	SPDR-30-S2-5	30MM STRAIGHT SPREADER FOR 50MM CONNECTIONS OF 5' STRUCTURES
6	CORNER-50-100°	3 WAY WELDED CORNER MADE FROM 2" TUBING (100°)
18	SHD-16-T1	TUBE 1 FOR 16' CONVEX THREE SIDED HANGING FABRIC STRUCTURES




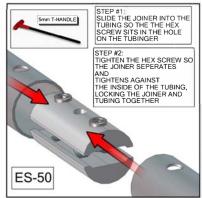


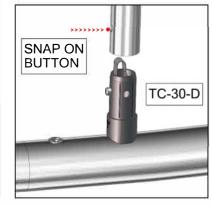


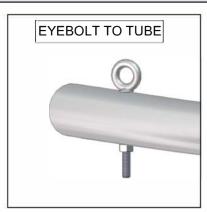

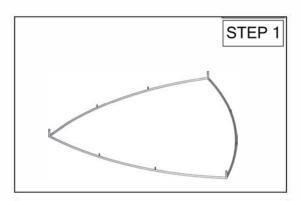

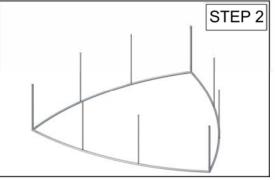

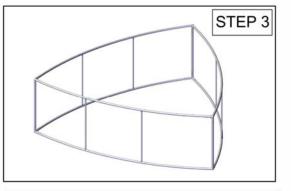

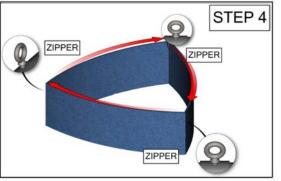

SET UP INSTRUCTIONS:

1. CONNECT BOTTOM AND TOP TUBES FOLLOWING THE LABELS
2. CONNECT SIDE TUBES
3. CLEAN THE FRAME AND PLACE THEM ON CLEAN PLACE
4. CAREFULLY REMOVE FABRIC COVER FROM BAG
5. PLACE COVER AROUND THE BOTTOM OF THE FRAME
6. PULL COVER CAREFULLY UP TO THE TOP
7. CLOSE ALL ZIPPERS
8. ADJUST FABRIC AROUND THE FRAME
9. CONNECT CABLE HARNESS TO THE EYEBOLTS
10. COMPLETELY TIGHTEN THREADED CONNECTORS

BREAK DOWN INSTRUCTIONS: REVERSE SET-UP STEPS TO BREAKDOWN FRAME

FABRIC CARE INSTRUCTIONS:


1. UNZIP COVER ZIPPERS

2. CAREFULLY REMOVE FABRIC COVER

3. CLOSE ALL ZIPPERS

4. FOLD OR ROLL NEATLY

5. PLACE FABRIC IN COVER BAG

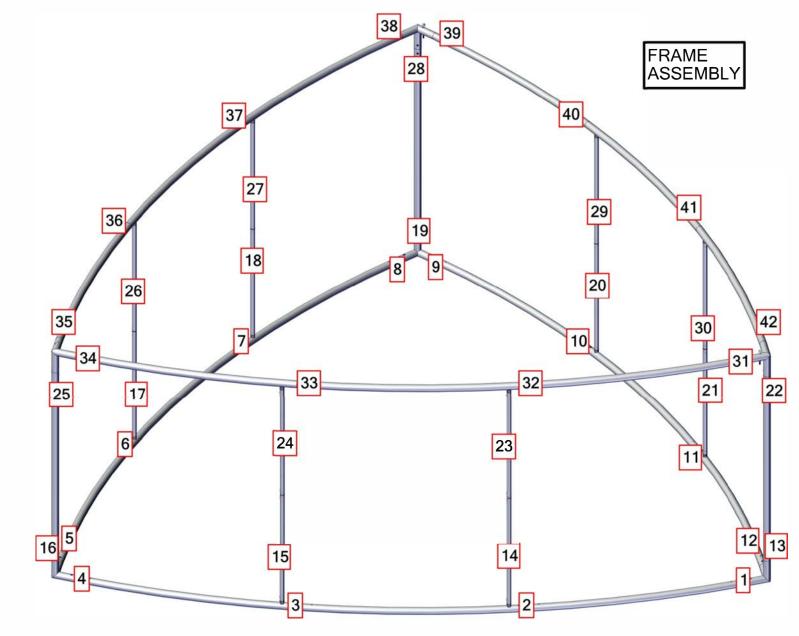


TOTAL WEIGHT: 148.0 (lbs)

MAX SIZE: 60.8 (in) HARDWARE: 97.3 (lbs) GRAPHIC: 41.0 (lbs)


QTY	CODE	DESCRIPTION
1	CH-SP3-HD-14	3-CABLE SINGLE POINT HEAVY DUTY HARNESS WITH 168" LENGTHS 1/8" CABLE
3	EYE BOLT	5/16-18X3.125" PARTIALLY THREADED EYE BOLT FOR 2" TUBING FABRIC STRUCTURES
6	CORNER-50-100°	3 WAY WELDED CORNER MADE FROM 2" TUBING (100°)
30	ES-50	EXPANDING SPIGOT FOR 50MM TUBE
18	SHD-16-T1	TUBE 1 FOR 16' CONVEX THREE SIDED HANGING FABRIC STRUCTURES
12	SPDR-30-S2-6	30MM STRAIGHT SPREADER FOR 50MM CONNECTIONS OF 6' STRUCTURES
3	SPDR-50-S2-6	2" TUBING SPREADER FOR 6' HIGH FOR FOUR SIDED HANGING FABRIC STRUCTURES
6	TC-30-S	INLINE CONNECTOR FOR 30MM TUBING




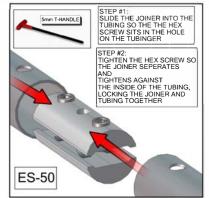








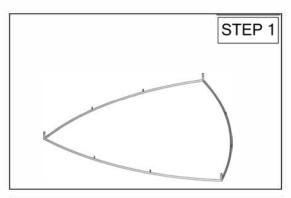

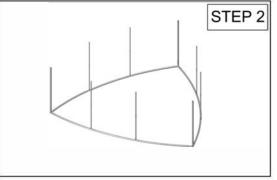


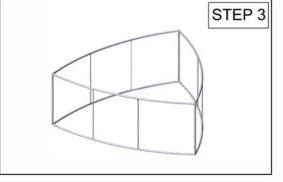

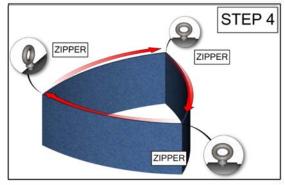


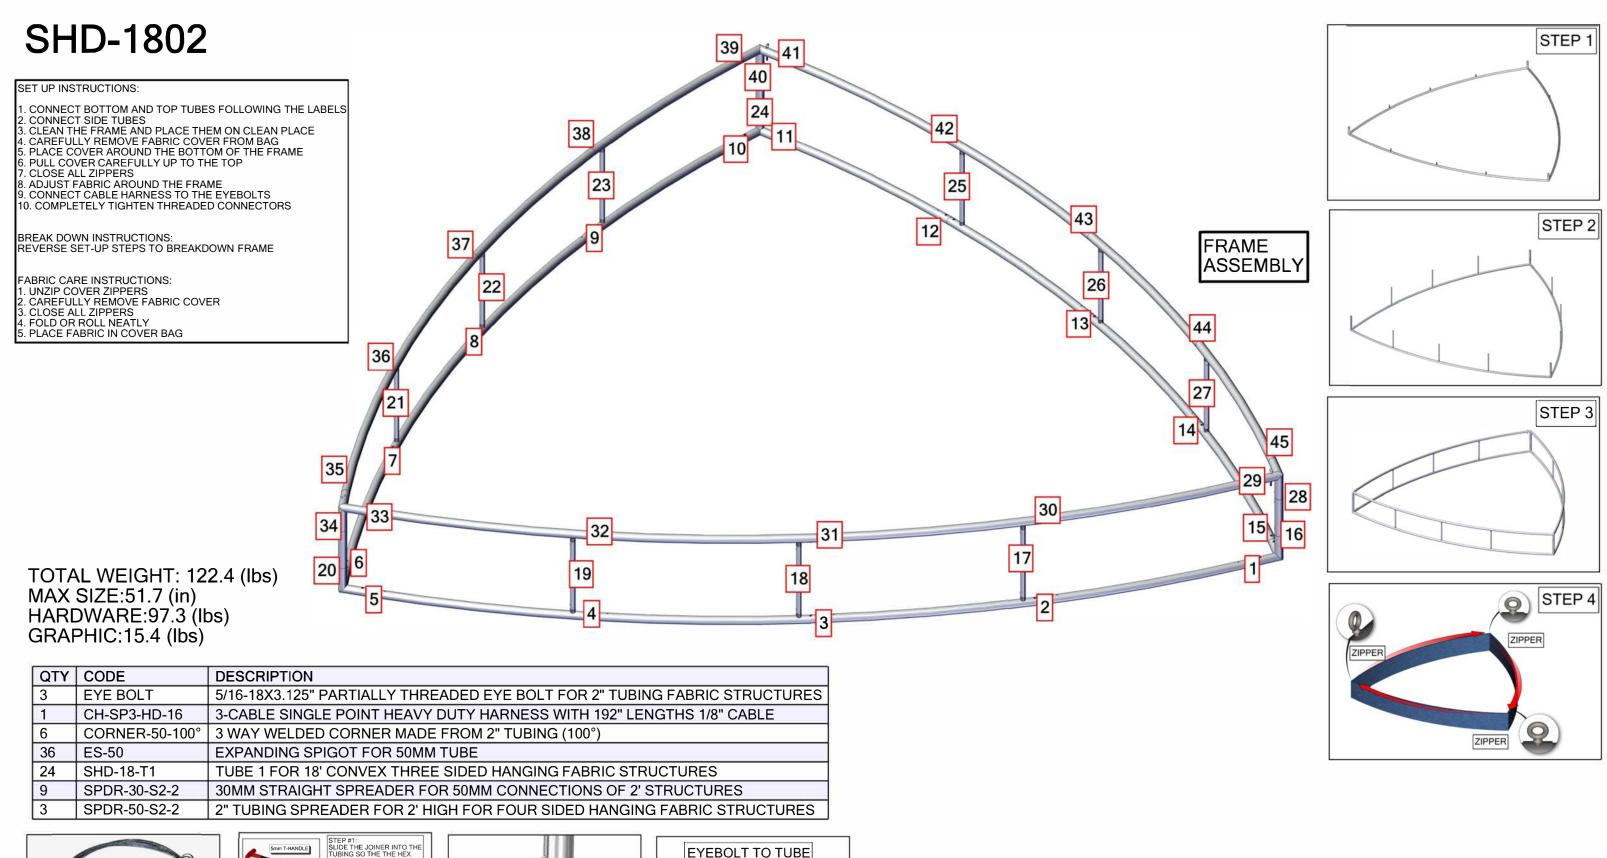



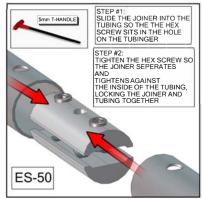



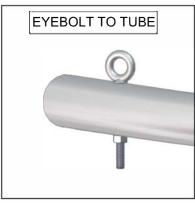

## SHD-1803 SET UP INSTRUCTIONS: . CONNECT BOTTOM AND TOP TUBES FOLLOWING THE LABELS 2. CONNECT SIDE TUBES 3. CLEAN THE FRAME AND PLACE THEM ON CLEAN PLACE 4. CAREFULLY REMOVE FABRIC COVER FROM BAG 5. PLACE COVER AROUND THE BOTTOM OF THE FRAME 6. PULL COVER CAREFULLY UP TO THE TOP COVER CAREFULLY UP TO THE TOP CLOSE ALL ZIPPERS ADJUST FABRIC AROUND THE FRAME CONNECT CABLE HARNESS TO THE EYEBOLTS COMPLETELY TIGHTEN THREADED CONNECTORS BREAK DOWN INSTRUCTIONS: REVERSE SET-UP STEPS TO BREAKDOWN FRAME

TOTAL WEIGHT: 134.4 (lbs) MAX SIZE:51.7 (in) HARDWARE: 101.3 (lbs) GRAPHIC:23.0 (lbs)

FABRIC CARE INSTRUCTIONS:


1. UNZIP COVER ZIPPERS


2. CAREFULLY REMOVE FABRIC COVER


3. CLOSE ALL ZIPPERS


4. FOLD OR ROLL NEATLY


5. PLACE FABRIC IN COVER BAG

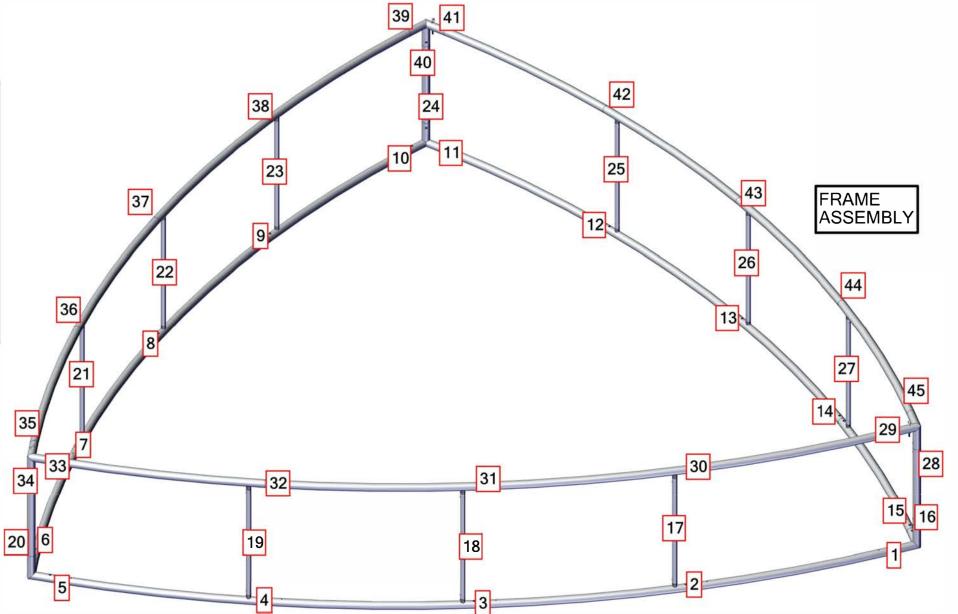

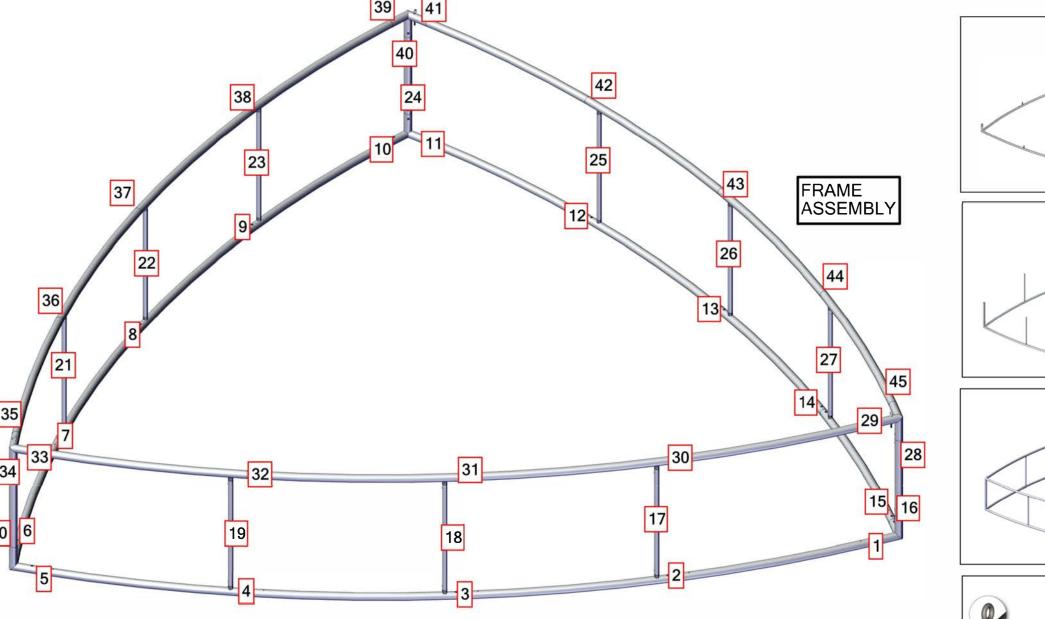

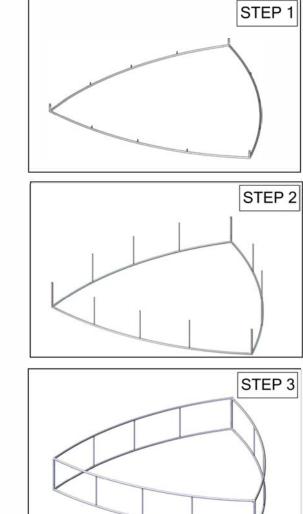


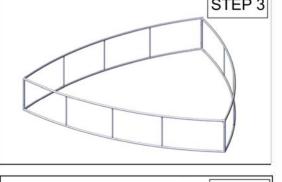


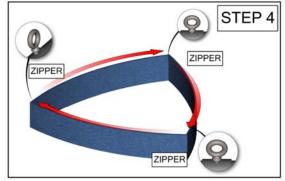


CODE	DESCRIPTION	
EYE BOLT	5/16-18X3.125" PARTIALLY THREADED EYE BOLT FOR 2" TUBING FABRIC STRUCTURES	
CH-SP3-HD-16	-16 3-CABLE SINGLE POINT HEAVY DUTY HARNESS WITH 192" LENGTHS 1/8" CABLE	
CORNER-50-100°	3 WAY WELDED CORNER MADE FROM 2" TUBING (100°)	
ES-50	EXPANDING SPIGOT FOR 50MM TUBE	
SHD-18-T1	TUBE 1 FOR 18' CONVEX THREE SIDED HANGING FABRIC STRUCTURES	
SPDR-30-S2-3	30MM STRAIGHT SPREADER FOR 50MM CONNECTIONS OF 3' STRUCTURES	
SPDR-50-S2-3	2" TUBING SPREADER FOR 3' HIGH FOR FOUR SIDED HANGING FABRIC STRUCTURES	
	EYE BOLT CH-SP3-HD-16 CORNER-50-100° ES-50 SHD-18-T1 SPDR-30-S2-3	



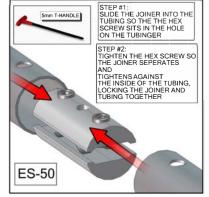

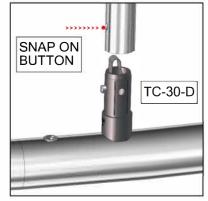

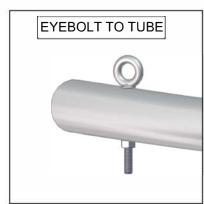

#### SET UP INSTRUCTIONS:

- 1. CONNECT BOTTOM AND TOP TUBES FOLLOWING THE LABELS
  2. CONNECT SIDE TUBES
  3. CLEAN THE FRAME AND PLACE THEM ON CLEAN PLACE
  4. CAREFULLY REMOVE FABRIC COVER FROM BAG
  5. PLACE COVER AROUND THE BOTTOM OF THE FRAME
  6. PULL COVER CAREFULLY UP TO THE TOP
  7. CLOSE ALL ZIPPERS
  8. ADJUST FABRIC AROUND THE FRAME
  9. CONNECT CABLE HARNESS TO THE EYEBOLTS
  10. COMPLETELY TIGHTEN THREADED CONNECTORS

BREAK DOWN INSTRUCTIONS: REVERSE SET-UP STEPS TO BREAKDOWN FRAME

- FABRIC CARE INSTRUCTIONS:


  1. UNZIP COVER ZIPPERS


  2. CAREFULLY REMOVE FABRIC COVER


  3. CLOSE ALL ZIPPERS


  4. FOLD OR ROLL NEATLY


  5. PLACE FABRIC IN COVER BAG

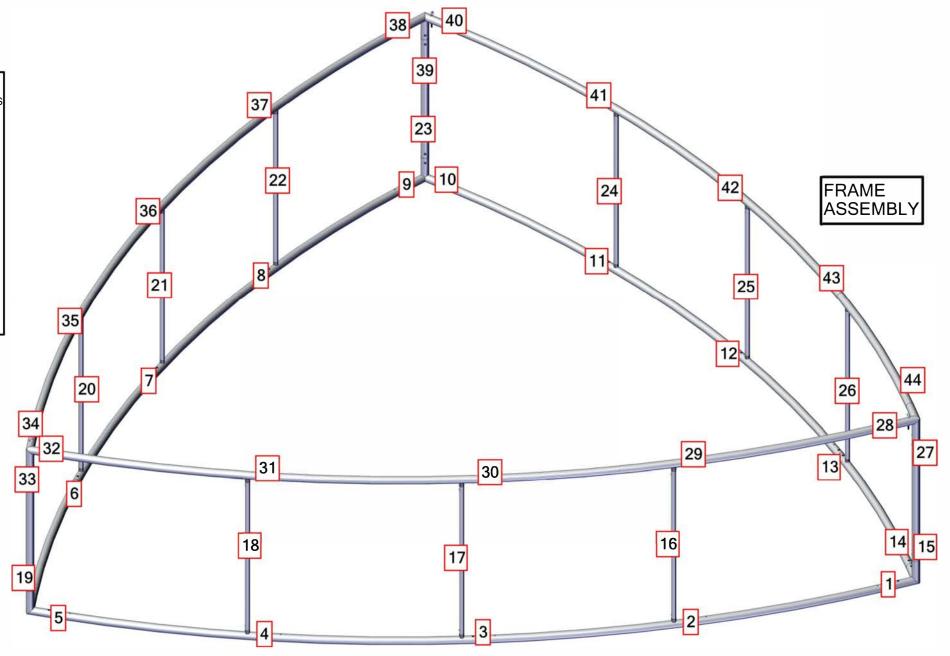

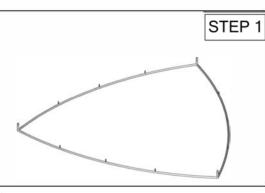

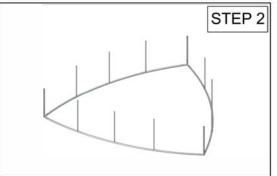

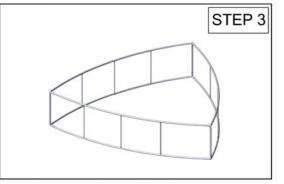


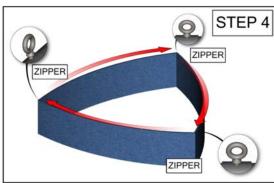

TOTAL WEIGHT: 146.4 (lbs) MAX SIZE:51.7 (in) HARDWARE: 105.2 (lbs) GRAPHIC:30.7 (lbs)

QTY	CODE	DESCRIPTION
3	EYE BOLT	5/16-18X3.125" PARTIALLY THREADED EYE BOLT FOR 2" TUBING FABRIC STRUCTURES
1	CH-SP3-HD-16	3-CABLE SINGLE POINT HEAVY DUTY HARNESS WITH 192" LENGTHS 1/8" CABLE
6	CORNER-50-100°	3 WAY WELDED CORNER MADE FROM 2" TUBING (100°)
36	ES-50	EXPANDING SPIGOT FOR 50MM TUBE
24	SHD-18-T1	TUBE 1 FOR 18' CONVEX THREE SIDED HANGING FABRIC STRUCTURES
9	SPDR-30-S2-4	30MM STRAIGHT SPREADER FOR 50MM CONNECTIONS OF 4' STRUCTURES
3	SPDR-50-S2-4	2" TUBING SPREADER FOR 4' HIGH FOR FOUR SIDED HANGING FABRIC STRUCTURES



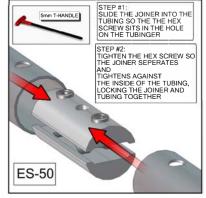





SET UP INSTRUCTIONS:

. CONNECT BOTTOM AND TOP TUBES FOLLOWING THE LABELS 2. CONNECT SIDE TUBES

3. CLEAN THE FRAME AND PLACE THEM ON CLEAN PLACE

4. CAREFULLY REMOVE FABRIC COVER FROM BAG 5. PLACE COVER AROUND THE BOTTOM OF THE FRAME

6. PULL COVER CAREFULLY UP TO THE TOP . CLOSE ALL ZIPPERS

9. CONNECT CABLE HARNESS TO THE EYEBOLTS

10. COMPLETELY TIGHTEN THREADED CONNECTORS

BREAK DOWN INSTRUCTIONS: REVERSE SET-UP STEPS TO BREAKDOWN FRAME


FABRIC CARE INSTRUCTIONS:


UNZIP COVER ZIPPERS
 CAREFULLY REMOVE FABRIC COVER


3. CLOSE ALL ZIPPERS


. FOLD OR ROLL NEATLY


5. PLACE FABRIC IN COVER BAG

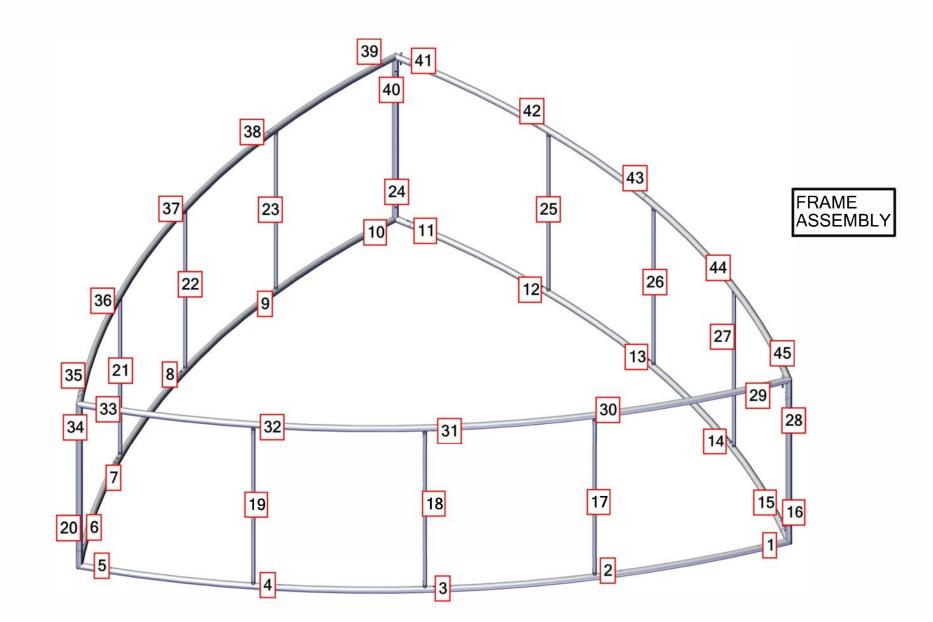

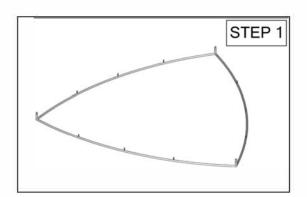

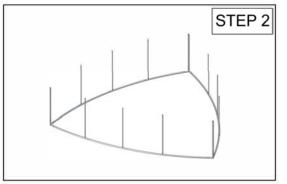

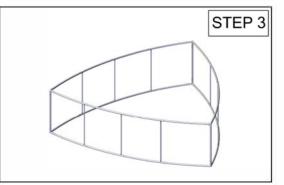

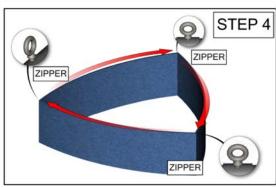


TOTAL WEIGHT: 158.4 (lbs)

MAX SIZE: 54.4 (in)


HARDWARE: 109.1 (lbs) GRAPHIC:38.4 (lbs)

QTY CODE **DESCRIPTION EYE BOLT** 5/16-18X3.125" PARTIALLY THREADED EYE BOLT FOR 2" TUBING FABRIC STRUCTURES CH-SP3-HD-16 3-CABLE SINGLE POINT HEAVY DUTY HARNESS WITH 192" LENGTHS 1/8" CABLE CORNER-50-100° 3 WAY WELDED CORNER MADE FROM 2" TUBING (100°) 36 ES-50 **EXPANDING SPIGOT FOR 50MM TUBE** 24 SHD-18-T1 TUBE 1 FOR 18' CONVEX THREE SIDED HANGING FABRIC STRUCTURES SPDR-30-S2-5 30MM STRAIGHT SPREADER FOR 50MM CONNECTIONS OF 5' STRUCTURES SPDR-50-S2-5 2" TUBING SPREADER FOR 5' HIGH FOR FOUR SIDED HANGING FABRIC STRUCTURES



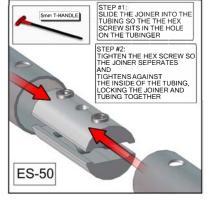



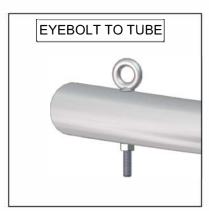

SET UP INSTRUCTIONS:

1. CONNECT BOTTOM AND TOP TUBES FOLLOWING THE LABELS
2. CONNECT SIDE TUBES
3. CLEAN THE FRAME AND PLACE THEM ON CLEAN PLACE
4. CAREFULLY REMOVE FABRIC COVER FROM BAG
5. PLACE COVER AROUND THE BOTTOM OF THE FRAME


PULL COVER CAREFULLY UP TO THE TOP

8. POLL COVER CAREFOLLY OF TO THE TOP
7. CLOSE ALL ZIPPERS
8. ADJUST FABRIC AROUND THE FRAME
9. CONNECT CABLE HARNESS TO THE EYEBOLTS
10. COMPLETELY TIGHTEN THREADED CONNECTORS


BREAK DOWN INSTRUCTIONS: REVERSE SET-UP STEPS TO BREAKDOWN FRAME


FABRIC CARE INSTRUCTIONS: 1. UNZIP COVER ZIPPERS


1. UNZIP COVER ZIPPERS
2. CAREFULLY REMOVE FABRIC COVER
3. CLOSE ALL ZIPPERS
4. FOLD OR ROLL NEATLY
5. PLACE FABRIC IN COVER BAG

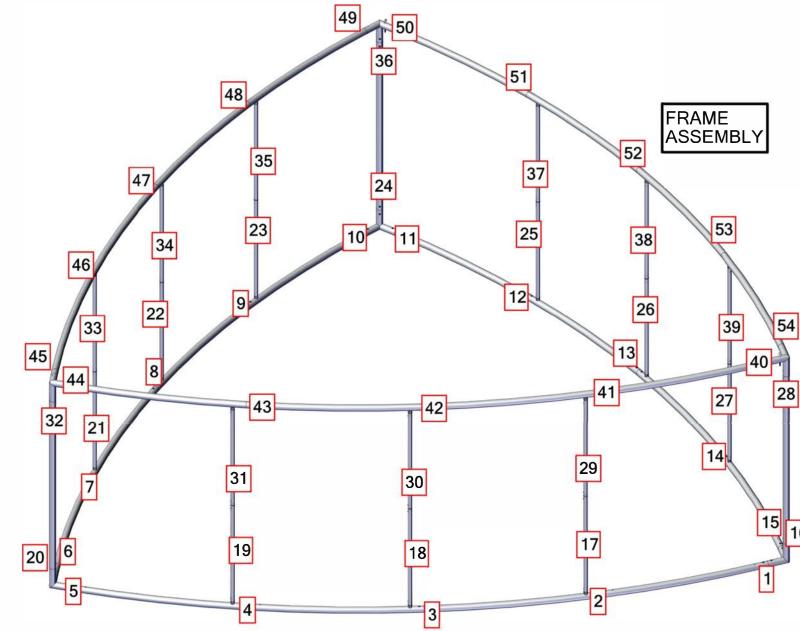


	[4	50			
	48	36	51		
	40			FRAME ASSEMBLY	
47	35		37	52 ASSENBET	
47		24	J		
46	23	10 11	25	38 53	
7 1	9		12	26	
33 22				39 54	
45 44 8		_	4	40	
32 21	43	42		27 28	
	31	30	29	14	
7	T	30	10	15 16	1
20 6	19	18	17	15 16	
5				1	

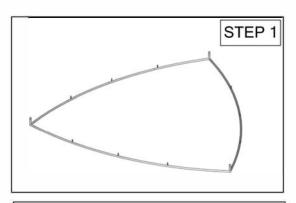

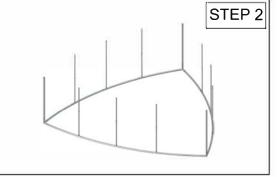

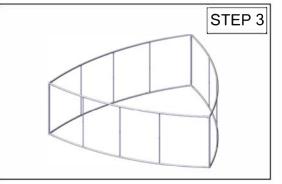

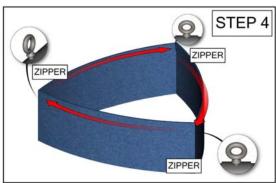


MAX SIZE: 58.0 (in) HARDWARE: 113.71 (lbs) GRAPHIC:46.1 (lbs)			
	CODE	DESCRIPTI	
3	EYE BOLT	5/16-18X3 1	


TOTAL WEIGHT: 171.1 (lbs)


QTY	CODE	DESCRIPTION
3	EYE BOLT	5/16-18X3.125" PARTIALLY THREADED EYE BOLT FOR 2" TUBING FABRIC STRUCTURES
1	CH-SP3-HD-16	3-CABLE SINGLE POINT HEAVY DUTY HARNESS WITH 192" LENGTHS 1/8" CABLE
6	CORNER-50-100°	3 WAY WELDED CORNER MADE FROM 2" TUBING (100°)
36	ES-50	EXPANDING SPIGOT FOR 50MM TUBE
24	SHD-18-T1	TUBE 1 FOR 18' CONVEX THREE SIDED HANGING FABRIC STRUCTURES
18	SPDR-30-S2-6	30MM STRAIGHT SPREADER FOR 50MM CONNECTIONS OF 6' STRUCTURES
3	SPDR-50-S2-6	2" TUBING SPREADER FOR 6' HIGH FOR FOUR SIDED HANGING FABRIC STRUCTURES
9	TC-30-S	INLINE CONNECTOR FOR 30MM TUBING



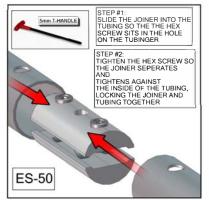




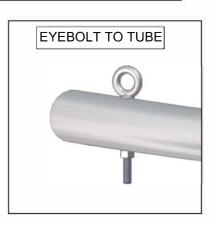


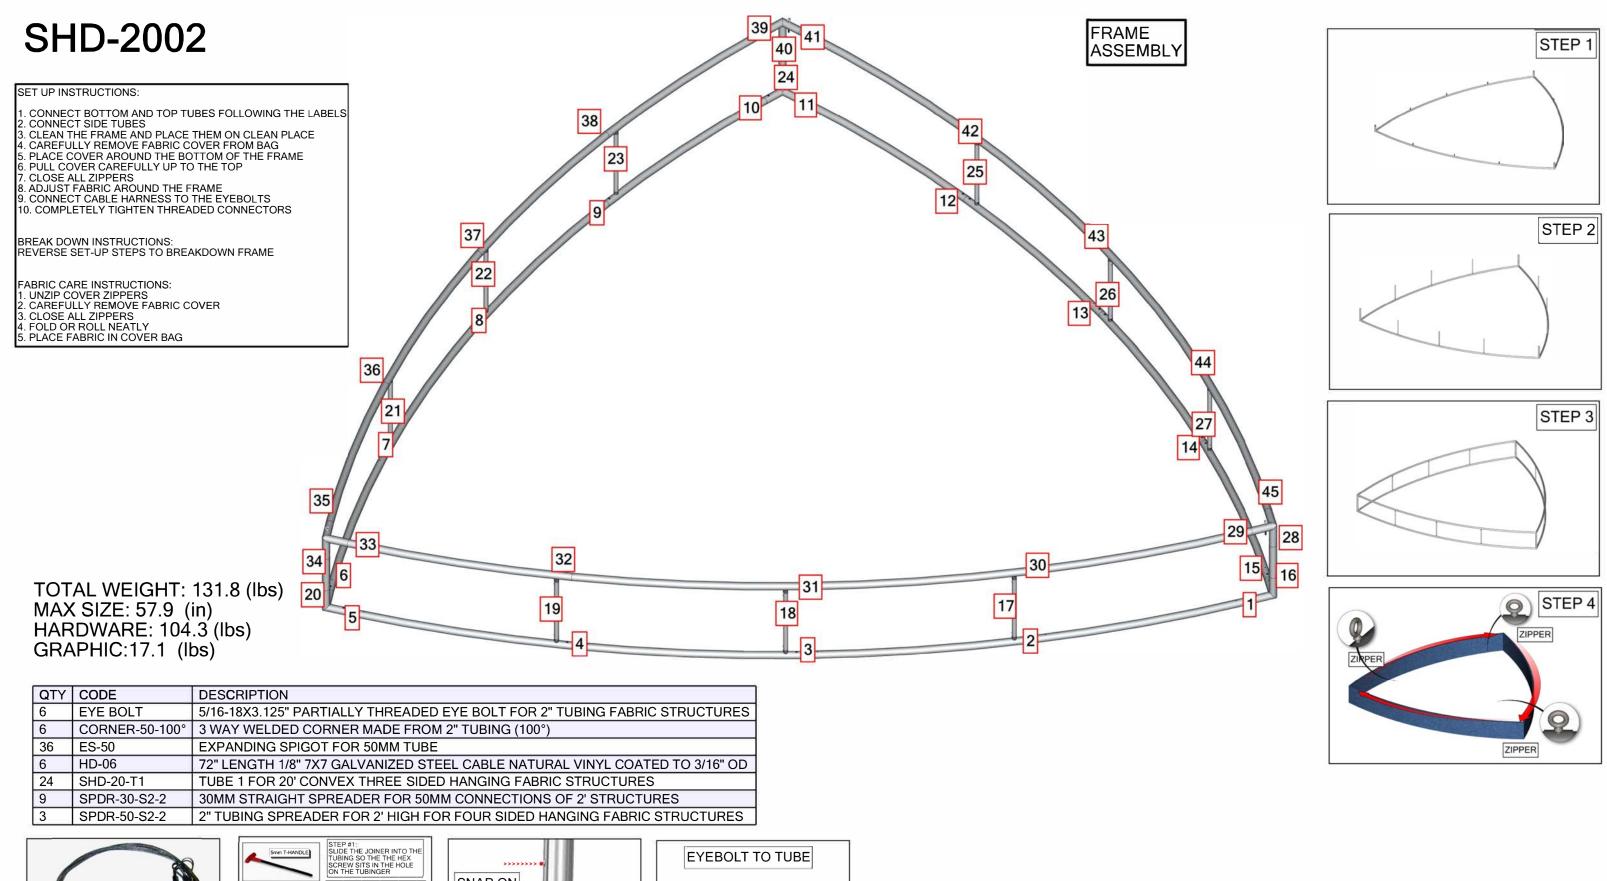



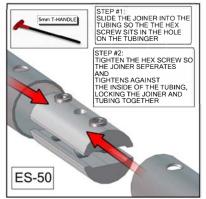



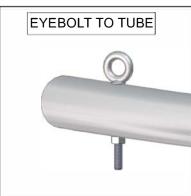

#### SET UP INSTRUCTIONS:

- 1. CONNECT BOTTOM AND TOP TUBES FOLLOWING THE LABELS
  2. CONNECT SIDE TUBES
  3. CLEAN THE FRAME AND PLACE THEM ON CLEAN PLACE
  4. CAREFULLY REMOVE FABRIC COVER FROM BAG
  5. PLACE COVER AROUND THE BOTTOM OF THE FRAME
  6. PULL COVER CAREFULLY UP TO THE TOP
  7. CLOSE ALL ZIPPERS
  8. ADJUST FABRIC AROUND THE FRAME
  9. CONNECT CABLE HARNESS TO THE EYEBOLTS
  10. COMPLETELY TIGHTEN THREADED CONNECTORS

BREAK DOWN INSTRUCTIONS: REVERSE SET-UP STEPS TO BREAKDOWN FRAME

- FABRIC CARE INSTRUCTIONS:


  1. UNZIP COVER ZIPPERS


  2. CAREFULLY REMOVE FABRIC COVER


  3. CLOSE ALL ZIPPERS


  4. FOLD OR ROLL NEATLY


  5. PLACE FABRIC IN COVER BAG

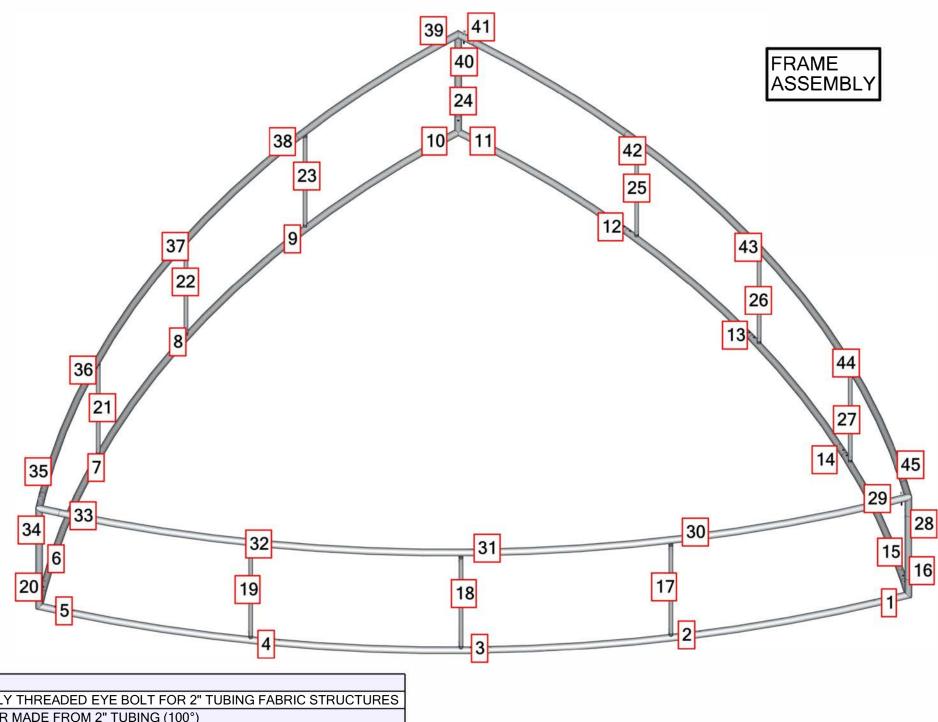

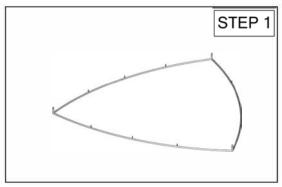

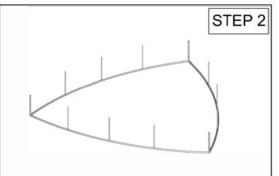

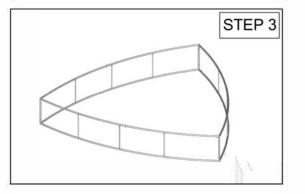

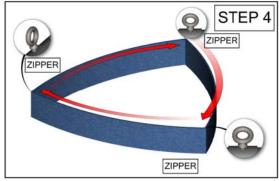





GRAPHIC:25.6 (lbs)

QTY	CODE	DESCRIPTION
6	EYE BOLT	5/16-18X3.125" PARTIALLY THREADED EYE BOLT FOR 2" TUBING FABRIC STRUCTURES
6	CORNER-50-100°	3 WAY WELDED CORNER MADE FROM 2" TUBING (100°)
36	ES-50	EXPANDING SPIGOT FOR 50MM TUBE
6	HD-06	72" LENGTH 1/8" 7X7 GALVANIZED STEEL CABLE NATURAL VINYL COATED TO 3/16" OD
24	SHD-20-T1	TUBE 1 FOR 20' CONVEX THREE SIDED HANGING FABRIC STRUCTURES
9	SPDR-30-S2-3	30MM STRAIGHT SPREADER FOR 50MM CONNECTIONS OF 3' STRUCTURES
3	SPDR-50-S2-3	2" TUBING SPREADER FOR 3' HIGH FOR FOUR SIDED HANGING FABRIC STRUCTURES



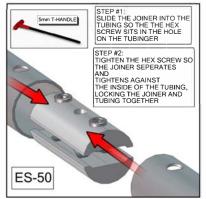



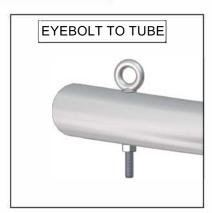

#### SET UP INSTRUCTIONS:

- . CONNECT BOTTOM AND TOP TUBES FOLLOWING THE LABELS

- 2. CONNECT SIDE TUBES
  3. CLEAN THE FRAME AND PLACE THEM ON CLEAN PLACE
  4. CAREFULLY REMOVE FABRIC COVER FROM BAG
  5. PLACE COVER AROUND THE BOTTOM OF THE FRAME
  6. PULL COVER CAREFULLY UP TO THE TOP

- COVER CAREFULLY UP TO THE TOP
   CLOSE ALL ZIPPERS
   ADJUST FABRIC AROUND THE FRAME
   CONNECT CABLE HARNESS TO THE EYEBOLTS
   COMPLETELY TIGHTEN THREADED CONNECTORS


BREAK DOWN INSTRUCTIONS: REVERSE SET-UP STEPS TO BREAKDOWN FRAME

- FABRIC CARE INSTRUCTIONS:

  1. UNZIP COVER ZIPPERS

  2. CAREFULLY REMOVE FABRIC COVER

- 3. CLOSE ALL ZIPPERS
  4. FOLD OR ROLL NEATLY
  5. PLACE FABRIC IN COVER BAG

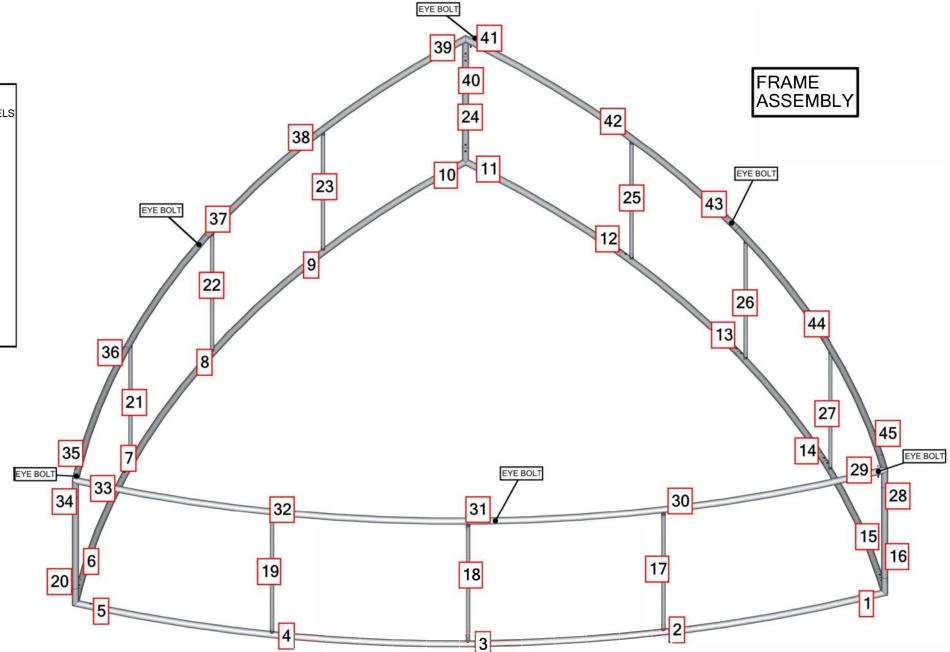


TOTAL WEIGHT: 157.5 (lbs)

MAX SIZE: 57.9 (in) HARDWARE: 112.1 (lbs) GRAPHIC:34.1 (lbs)


QTY	CODE	DESCRIPTION	
6	EYE BOLT	5/16-18X3.125" PARTIALLY THREADED EYE BOLT FOR 2" TUBING FABRIC STRUCTURES	
6	CORNER-50-100°	3 WAY WELDED CORNER MADE FROM 2" TUBING (100°)	
36	ES-50	EXPANDING SPIGOT FOR 50MM TUBE	
6	HD-06	72" LENGTH 1/8" 7X7 GALVANIZED STEEL CABLE NATURAL VINYL COATED TO 3/16" OD	
24	SHD-20-T1	TUBE 1 FOR 20' CONVEX THREE SIDED HANGING FABRIC STRUCTURES	
9	SPDR-30-S2-4	30MM STRAIGHT SPREADER FOR 50MM CONNECTIONS OF 4' STRUCTURES	
3	SPDR-50-S2-4	2" TUBING SPREADER FOR 4' HIGH FOR FOUR SIDED HANGING FABRIC STRUCTURES	




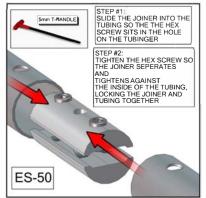







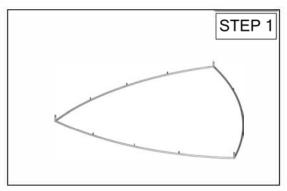

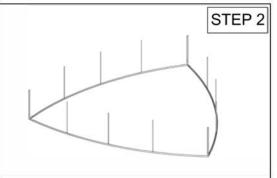

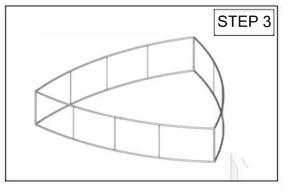

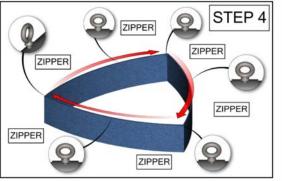

#### SET UP INSTRUCTIONS:

- 1. CONNECT BOTTOM AND TOP TUBES FOLLOWING THE LABELS
  2. CONNECT SIDE TUBES
  3. CLEAN THE FRAME AND PLACE THEM ON CLEAN PLACE
  4. CAREFULLY REMOVE FABRIC COVER FROM BAG
  5. PLACE COVER AROUND THE BOTTOM OF THE FRAME
  6. PULL COVER CAREFULLY UP TO THE TOP
  7. CLOSE ALL ZIPPERS
  8. ADJUST FABRIC AROUND THE FRAME
  9. CONNECT CABLE HARNESS TO THE EYEBOLTS
  10. COMPLETELY TIGHTEN THREADED CONNECTORS

BREAK DOWN INSTRUCTIONS: REVERSE SET-UP STEPS TO BREAKDOWN FRAME

- FABRIC CARE INSTRUCTIONS:


  1. UNZIP COVER ZIPPERS

  2. CAREFULLY REMOVE FABRIC COVER


  3. CLOSE ALL ZIPPERS

  4. FOLD OR ROLL NEATLY

  5. PLACE FABRIC IN COVER BAG

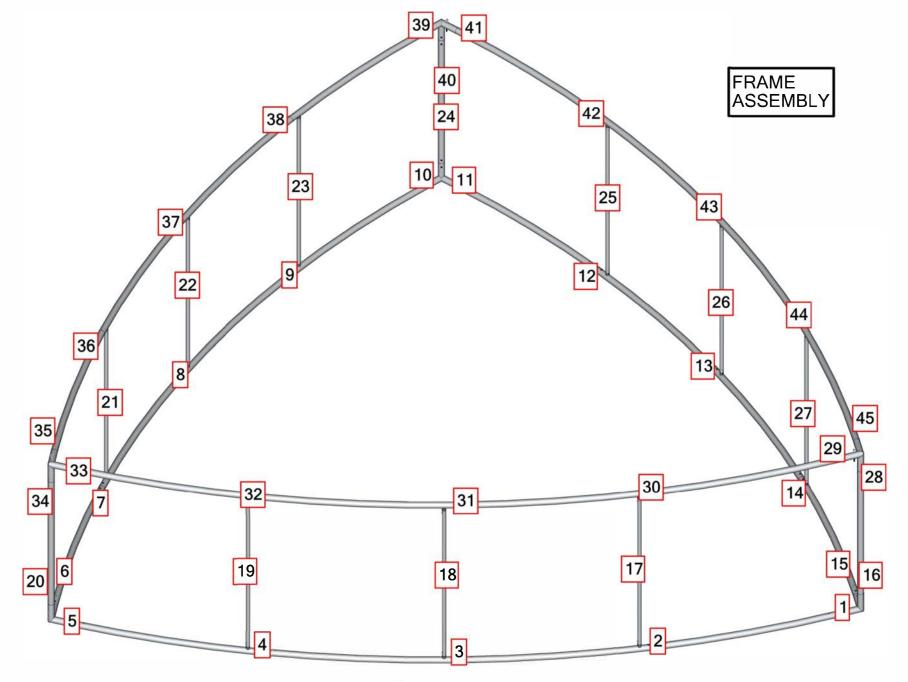




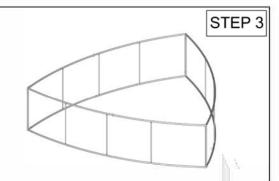

STEP 1

STEP 2

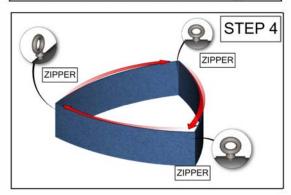




GRAPHIC:47.2 (lbs)

QTY	CODE	DESCRIPTION	
6	EYE BOLT	5/16-18X3.125" PARTIALLY THREADED EYE BOLT FOR 2" TUBING FABRIC STRUCTURES	
6	CORNER-50-100°	3 WAY WELDED CORNER MADE FROM 2" TUBING (100°)	
36	ES-50	EXPANDING SPIGOT FOR 50MM TUBE	
6	HD-06	72" LENGTH 1/8" 7X7 GALVANIZED STEEL CABLE NATURAL VINYL COATED TO 3/16" OD	
24	SHD-20-T1	TUBE 1 FOR 20' CONVEX THREE SIDED HANGING FABRIC STRUCTURES	
9	SPDR-30-S2-5	30MM STRAIGHT SPREADER FOR 50MM CONNECTIONS OF 5' STRUCTURES	
3	SPDR-50-S2-5	2" TUBING SPREADER FOR 5' HIGH FOR FOUR SIDED HANGING FABRIC STRUCTURES	



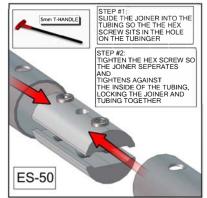





#### SET UP INSTRUCTIONS:

- 1. CONNECT BOTTOM AND TOP TUBES FOLLOWING THE LABELS
  2. CONNECT SIDE TUBES
  3. CLEAN THE FRAME AND PLACE THEM ON CLEAN PLACE
  4. CAREFULLY REMOVE FABRIC COVER FROM BAG
  5. PLACE COVER AROUND THE BOTTOM OF THE FRAME
  6. PULL COVER CAREFULLY UP TO THE TOP
  7. CLOSE ALL ZIPPERS
  8. ADJUST FABRIC AROUND THE FRAME
  9. CONNECT CABLE HARNESS TO THE EYEBOLTS
  10. COMPLETELY TIGHTEN THREADED CONNECTORS

BREAK DOWN INSTRUCTIONS: REVERSE SET-UP STEPS TO BREAKDOWN FRAME

- FABRIC CARE INSTRUCTIONS:


  1. UNZIP COVER ZIPPERS

  2. CAREFULLY REMOVE FABRIC COVER

  3. CLOSE ALL ZIPPERS

  4. FOLD OR ROLL NEATLY

  5. PLACE FABRIC IN COVER BAG

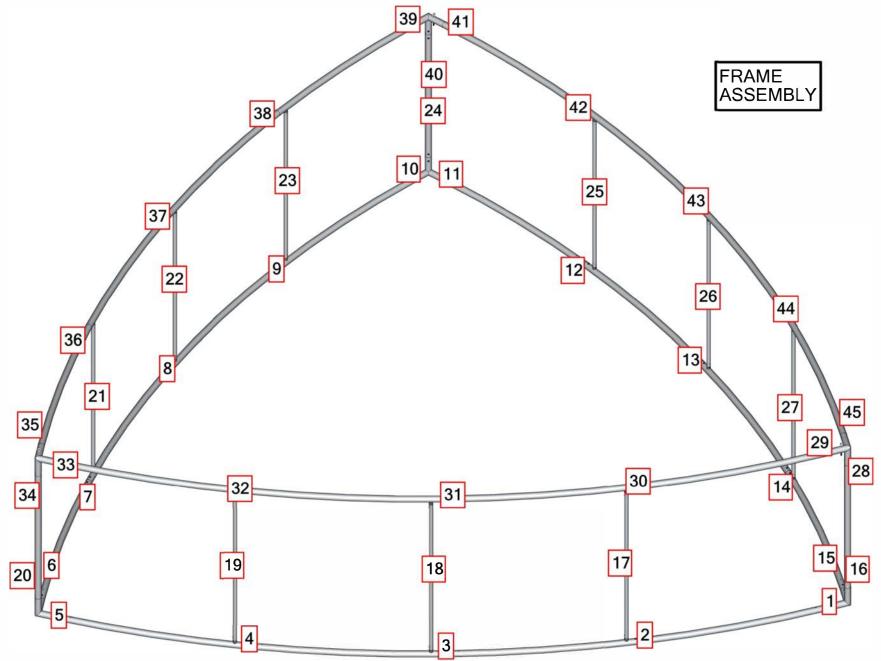

TOTAL WEIGHT: 183.9 (lbs)

MAX SIZE: 58.0 (in) HARDWARE: 120.60 (lbs)

GRAPHIC:51.2 (lbs)

QTY	CODE	DESCRIPTION
6	EYE BOLT	5/16-18X3.125" PARTIALLY THREADED EYE BOLT FOR 2" TUBING FABRIC STRUCTURES
6	CORNER-50-100°	3 WAY WELDED CORNER MADE FROM 2" TUBING (100°)
36	ES-50	EXPANDING SPIGOT FOR 50MM TUBE
6	HD-06	72" LENGTH 1/8" 7X7 GALVANIZED STEEL CABLE NATURAL VINYL COATED TO 3/16" OD
24	SHD-20-T1	TUBE 1 FOR 20' CONVEX THREE SIDED HANGING FABRIC STRUCTURES
18	SPDR-30-S2-6	30MM STRAIGHT SPREADER FOR 50MM CONNECTIONS OF 6' STRUCTURES
3	SPDR-50-S2-6	2" TUBING SPREADER FOR 6' HIGH FOR FOUR SIDED HANGING FABRIC STRUCTURES







